

# PENKO Engineering B.V.

Your Partner for Fully Engineered Factory Solutions



How to...  
Connect a 1020 to a Siemens PLC



an ETC Company

## Table of Contents

GSD File .....	4
Wiring .....	4
Setup the 1020 .....	5
Simatic Manager (1) .....	6
Create a project.....	6
Setting up the Profibus network .....	9
Install the GSD file .....	15
Add the 1020 to the Profibus network.....	17
SIMATIC Manager (2) .....	22
GSD file explanation .....	24
Inputs.....	24
Read weight register .....	25
Read status .....	27
Read commands .....	29
Read weight select register .....	31
Read inputs.....	32
Read outputs .....	33
Read preset Tare .....	33
Read indicator gross x 10 .....	35
Read indicator net x 10 .....	36
Read indicator tare x 10 .....	37
Read multirange weight .....	38
Outputs.....	39
Set commands .....	40
Set weight select register .....	42
Set preset tare .....	44
Set level 1 .....	45
Set level 2 .....	46
Set level 3 .....	47
Set level 4 .....	48



PENKO How to...  
Connect a 1020 to a Siemens PLC

Complete program to read and write values .....	49
Variable table .....	50
Read:.....	50
Write:.....	51

## GSD File


The GSD File can be found at our website [www.penko.com](http://www.penko.com). There are 2 GSD files, the indicator is only used for the 1020 indicator and the controller is used for the 1020 Mono Filler, Check Weigher or Belt Weigher.

## Wiring

To connect the 1020 to a PLC, you only need to connect wire 3 (RxD/TxD-P) and 8 (RxD/TxD-N) of the connector as shown below. The first and last device on the chain need to have the bus termination.


*If you use an original Profibus connector make sure that you use the bus termination on the Profibus connector and not on the 1020 (the dipswitch next to the Profibus connector must be both in the "OFF" position), otherwise the Profibus communication will not work.*

*If you do not use an original Profibus connector with a termination. You must set the dipswitch next to the Profibus connector both in the "ON" position.*

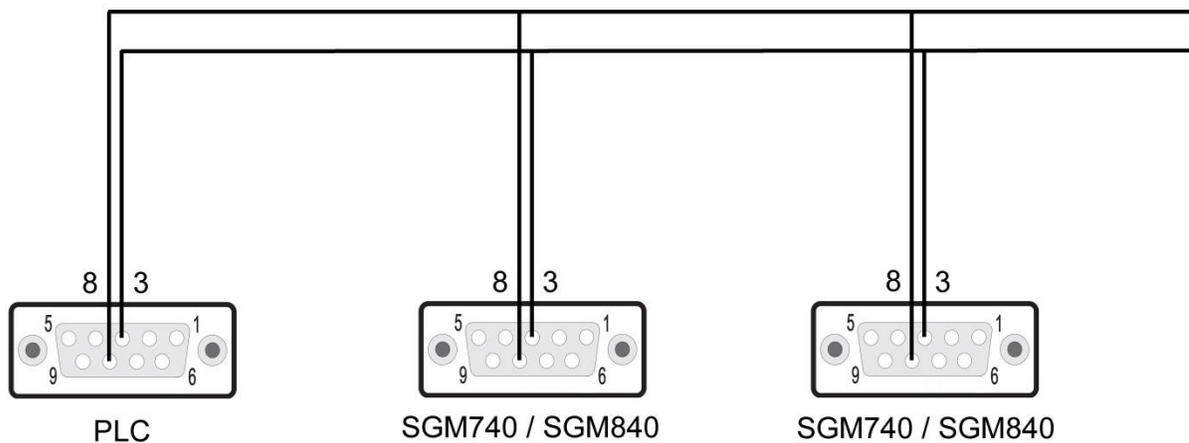

## Setup the 1020

Connect the 1020 to a PC using an USB-cable and open Pi Mach II and double click on **1020**, double click on **Enable Full Setup** then double click on **System Setup**, double click on **Communication**, and double click on **Profibus**, set the **Address** and **Format** the same as picture below. Click on **Apply** to save settings.

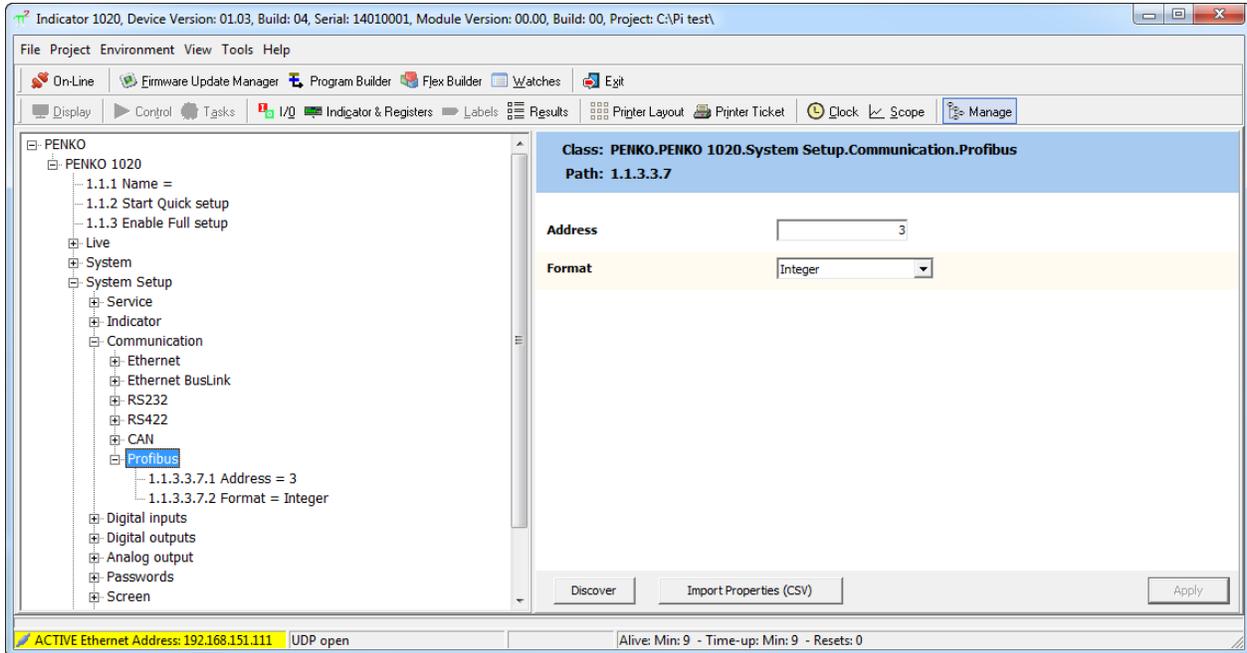


## Simatic Manager (1)


*In the example below we use a Siemens Simatic S7-300 CPU315-2-DP PLC.*

### Create a project


Open Simatic Manager and follow the STEP 7 Wizard. Click on **Next** to begin the Wizard.

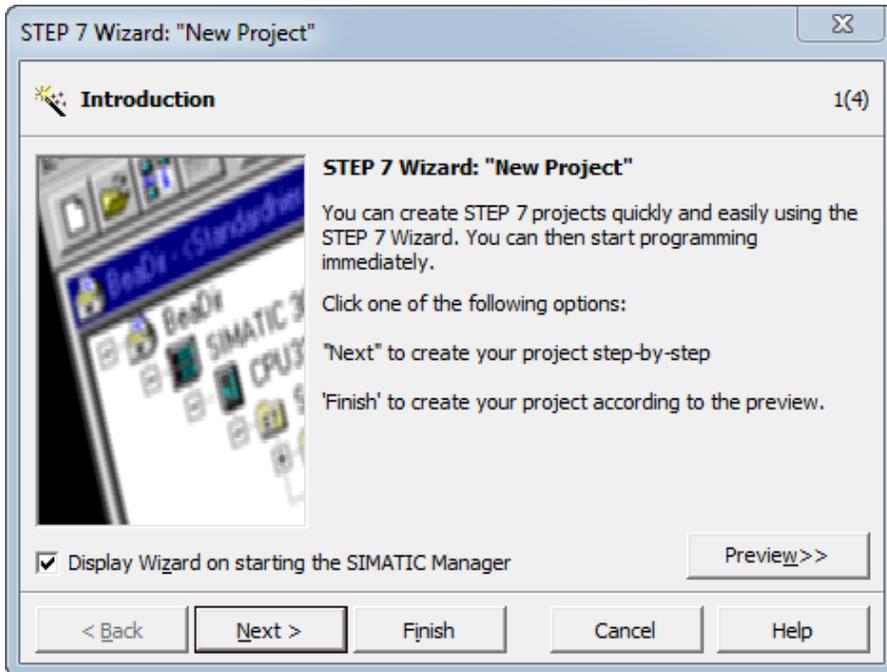


Select your PLC and click on **Next**.

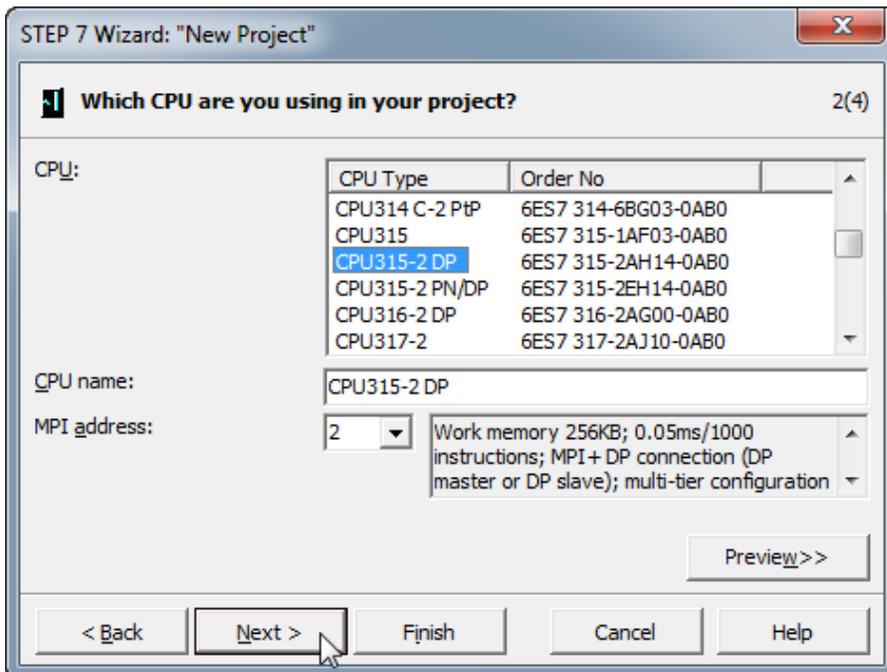

Select the blocks you want to add. In the example below we select all the blocks. When the blocks are selected, click on **Next**.

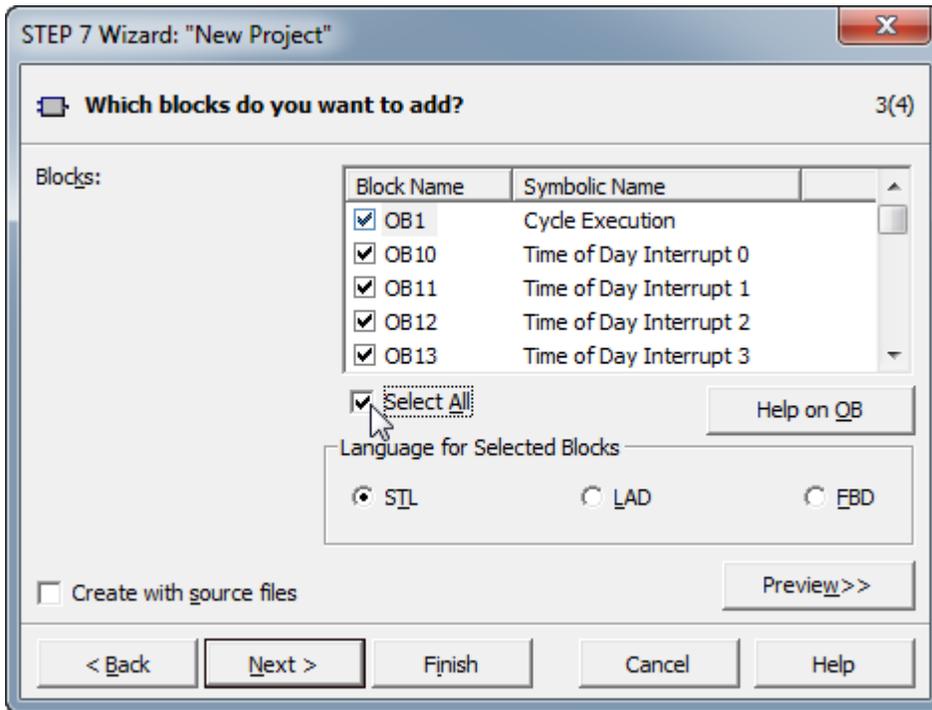


Give the project a name and click on **Finish**.

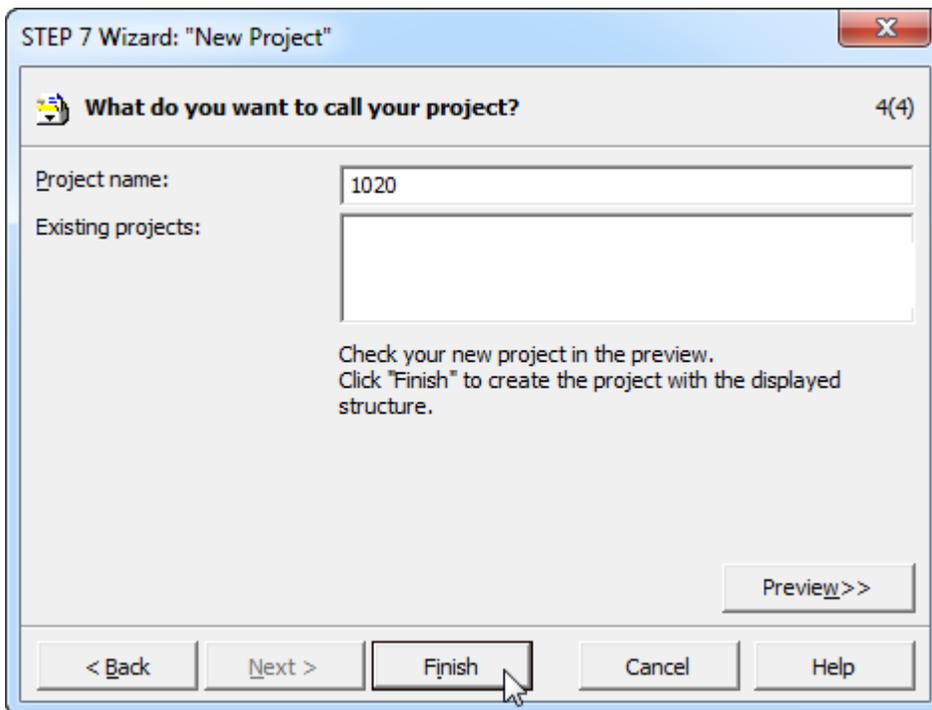


PENKO How to...  
Connect a 1020 to a Siemens PLC

The project is being created.

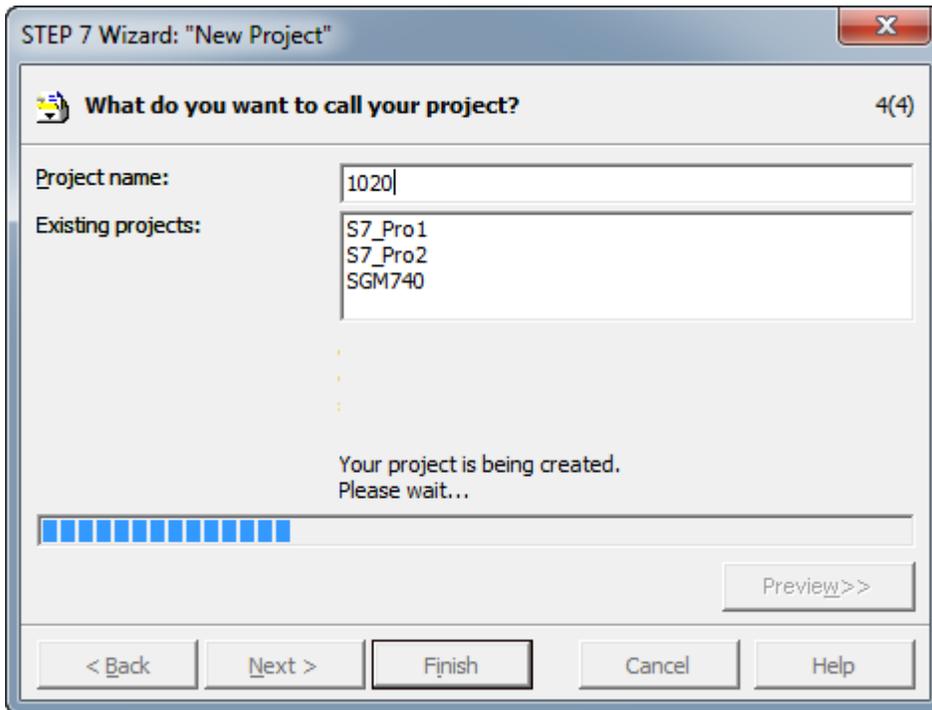


The project is shown below.

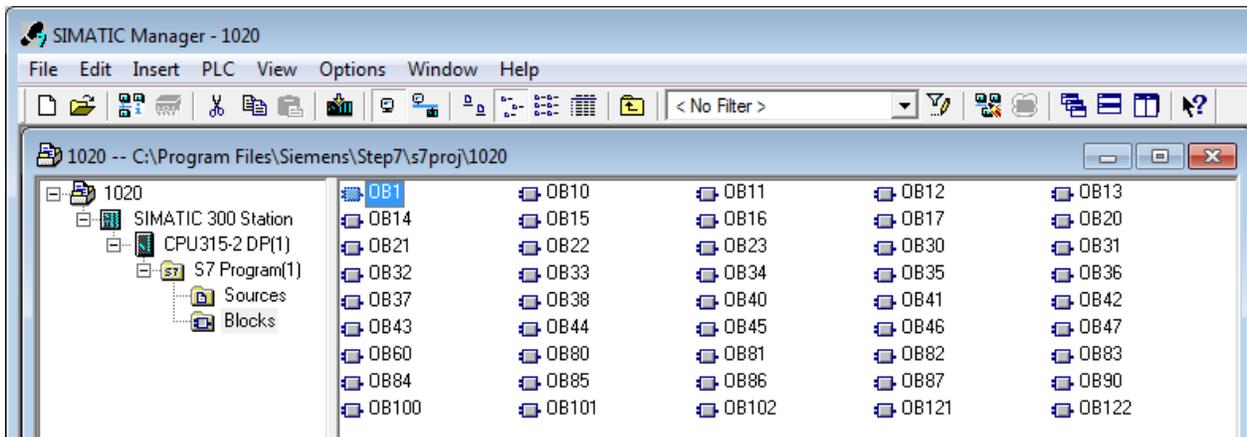


PENKO How to...  
Connect a 1020 to a Siemens PLC

## Setting up the Profibus network


Click on your CPU name.

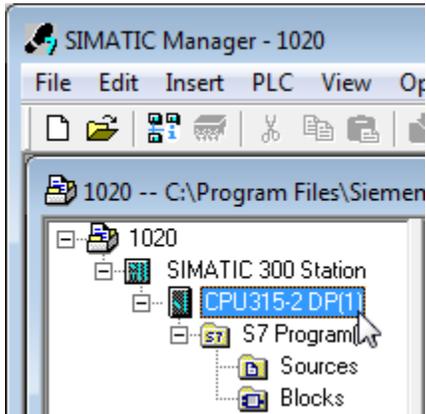

Double click on **Connections**.

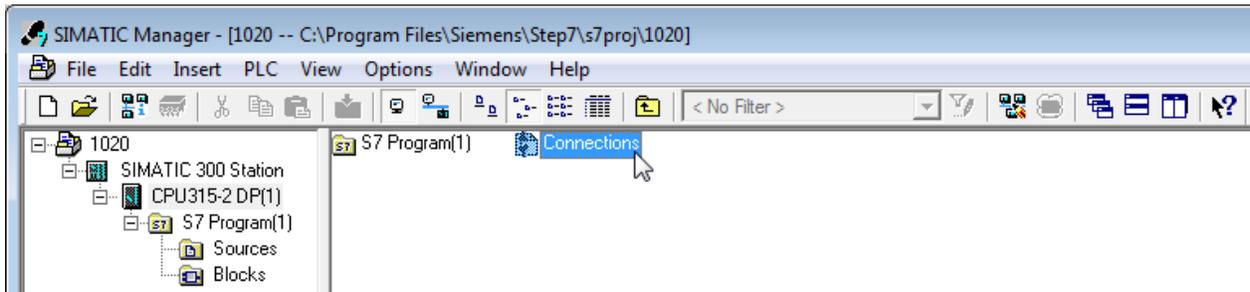


The program **NetPro** will open.

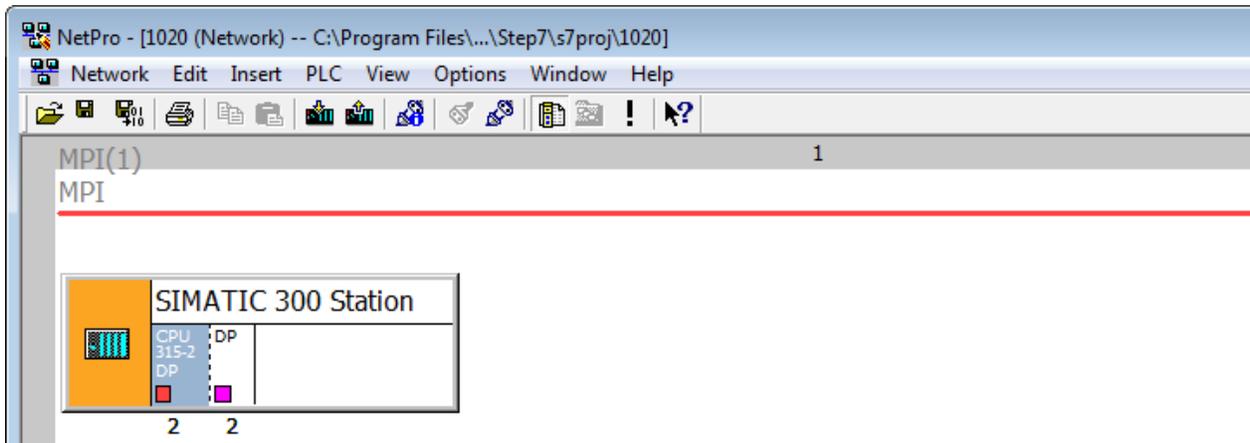


PENKO How to...  
Connect a 1020 to a Siemens PLC


Double click on SIMATIC 300 Station.

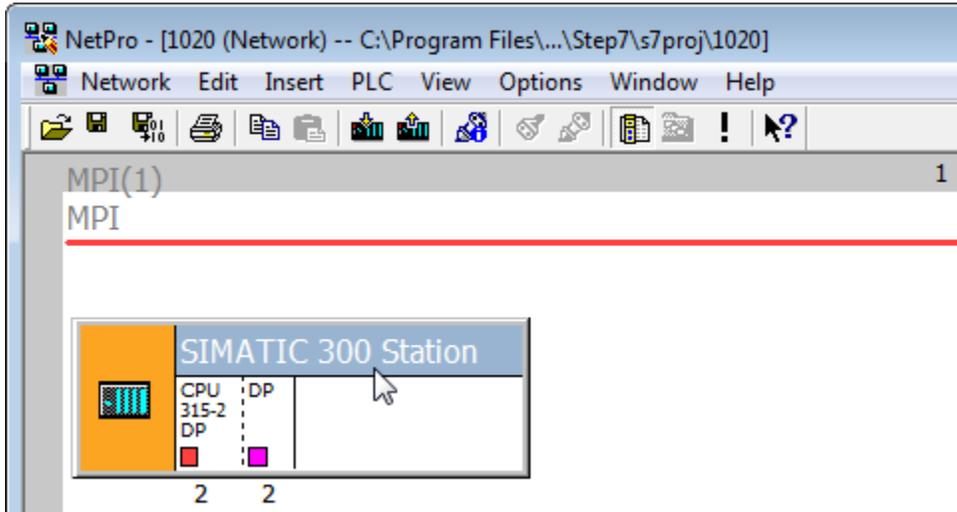


The program **HW Config** will open. Double click on the line **DP**.

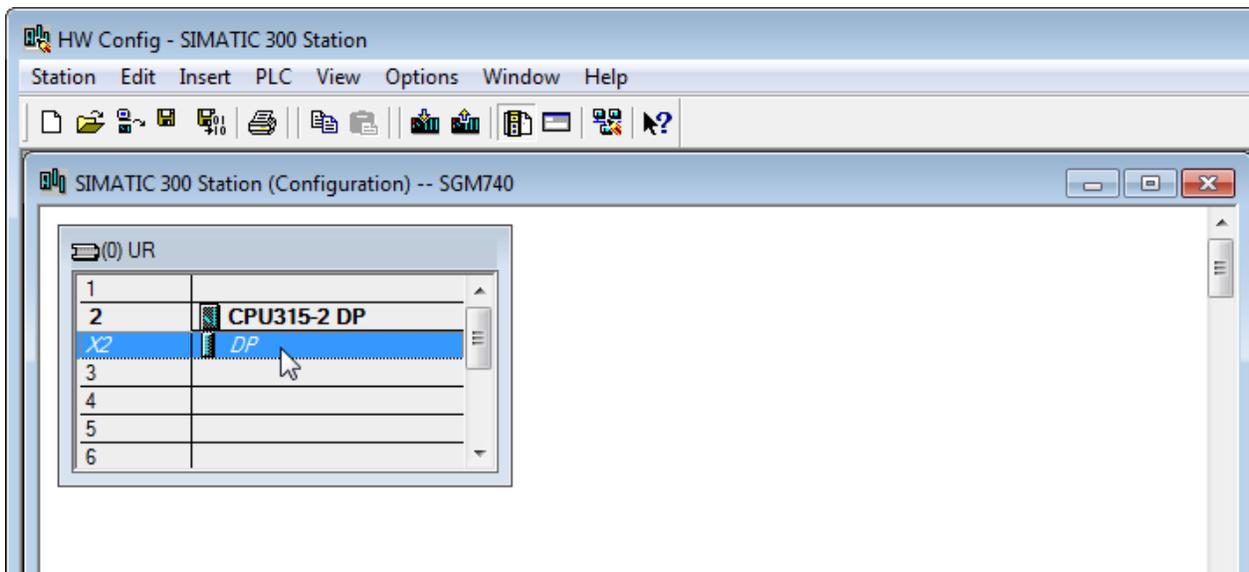


Click on **Properties**.

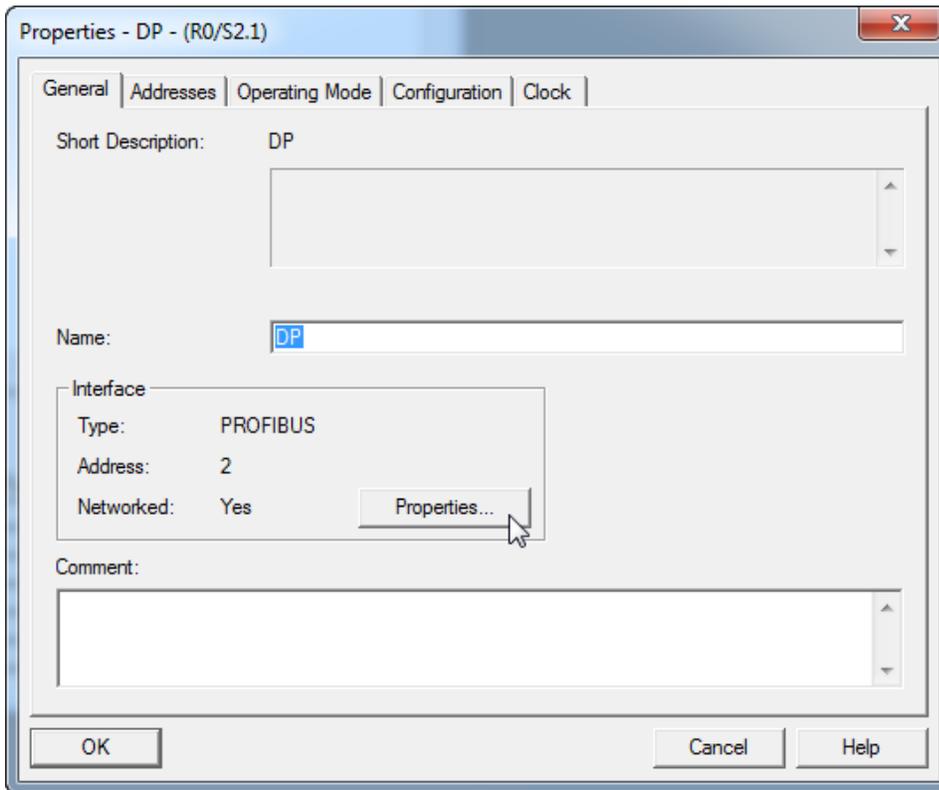


Set the Profibus address for the PLC and click on **New** to set up a Subnet.

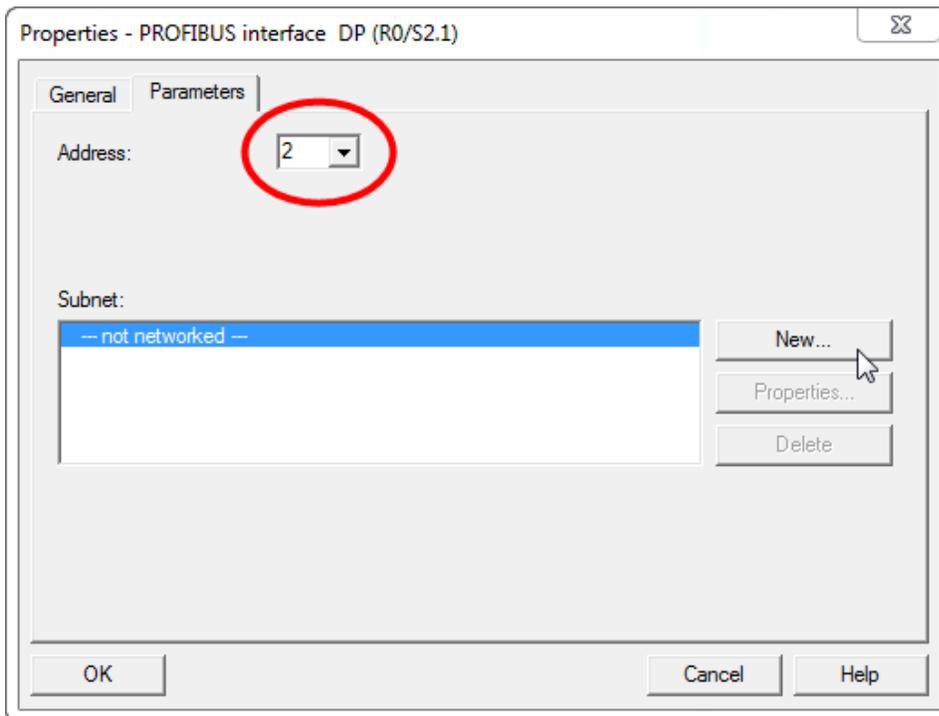

Give the subnet a name and go to the tap **Network Settings**.

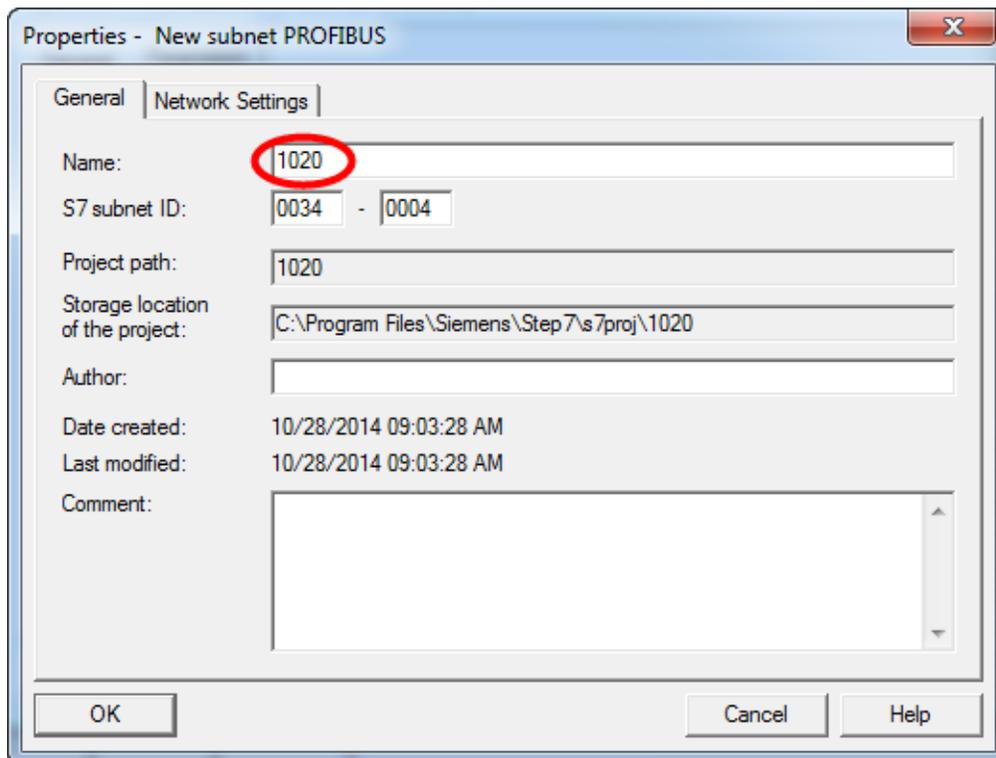


Set the **Transmission Rate** and **Profile** and click on **OK**.

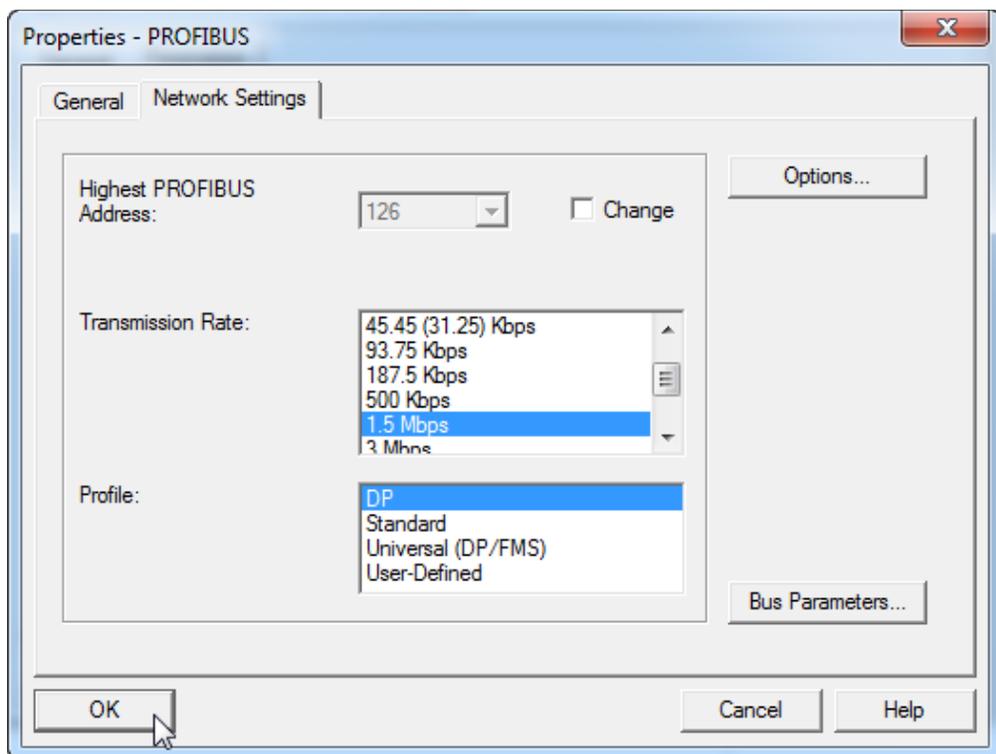


PENKO How to...  
Connect a 1020 to a Siemens PLC

Click on **OK** to complete the Subnet setup.

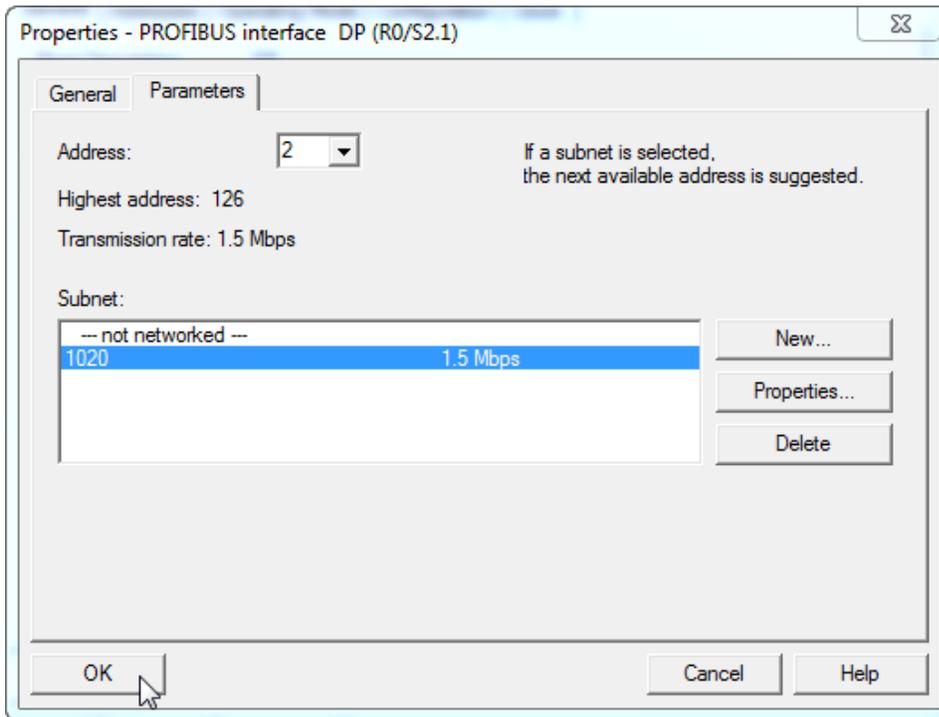


Go to the tab **Operating Mode** and make sure **DP master** is chosen. Click on **OK**.

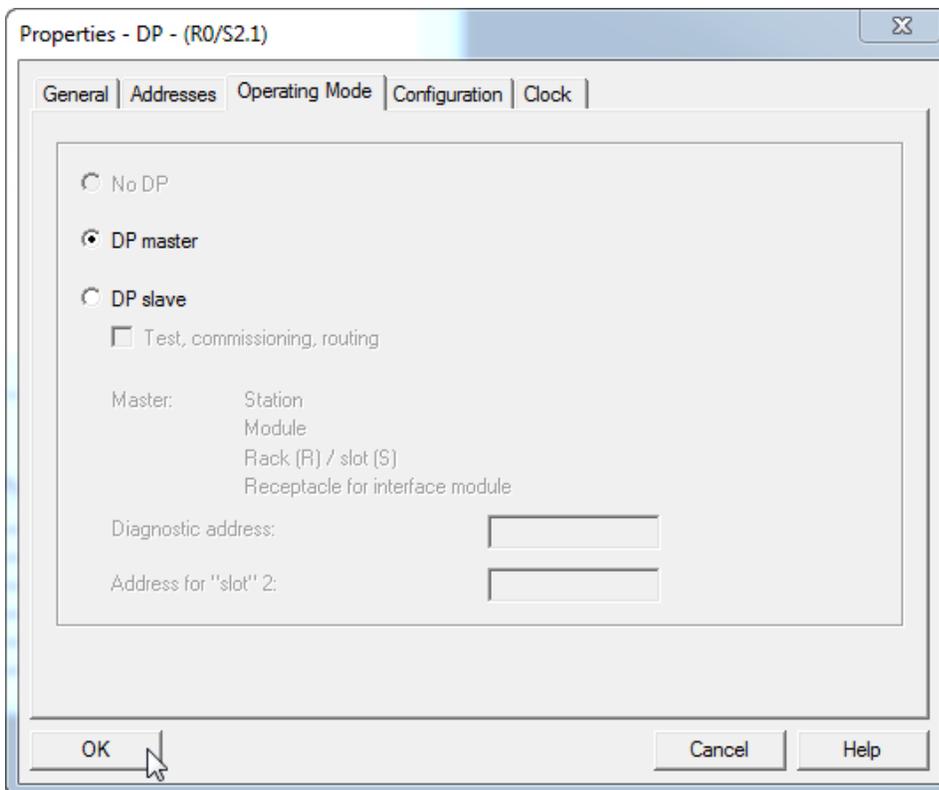


PENKO How to...  
Connect a 1020 to a Siemens PLC

The SGM740: DP master system line will appear.

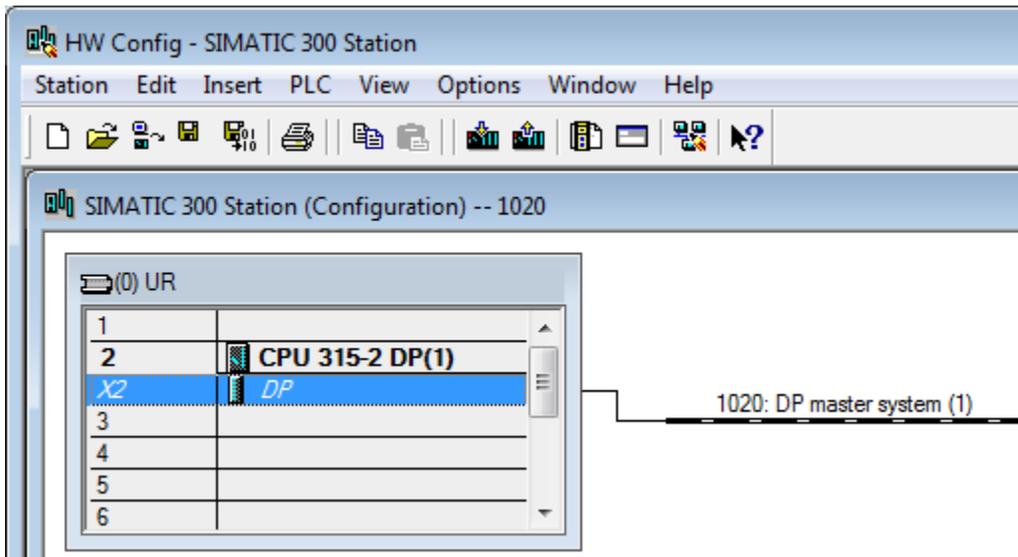


## Install the GSD file


Click on **Options** and **Install GSD File...**

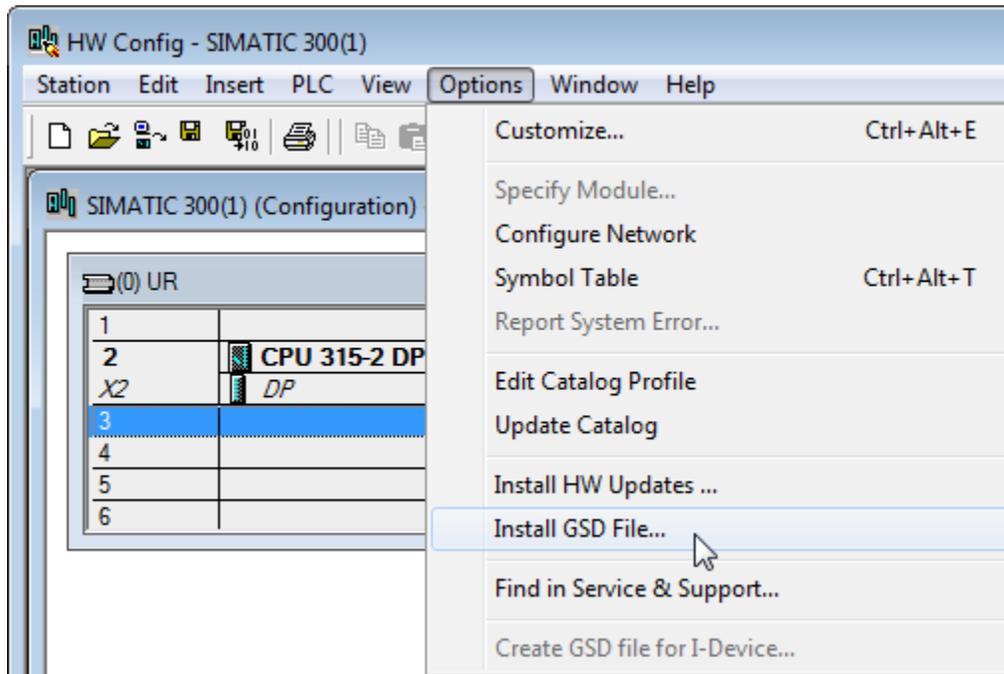

Click on **Browse** to set the location folder where the GSD file is stored.

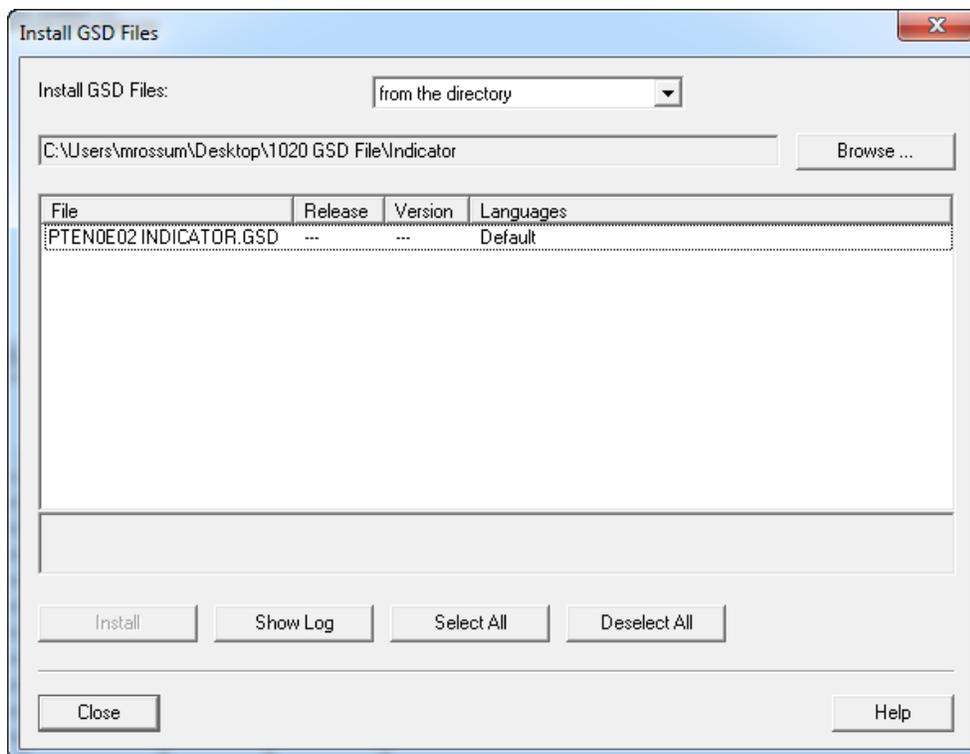


Select the GSD file and click on **Install**.

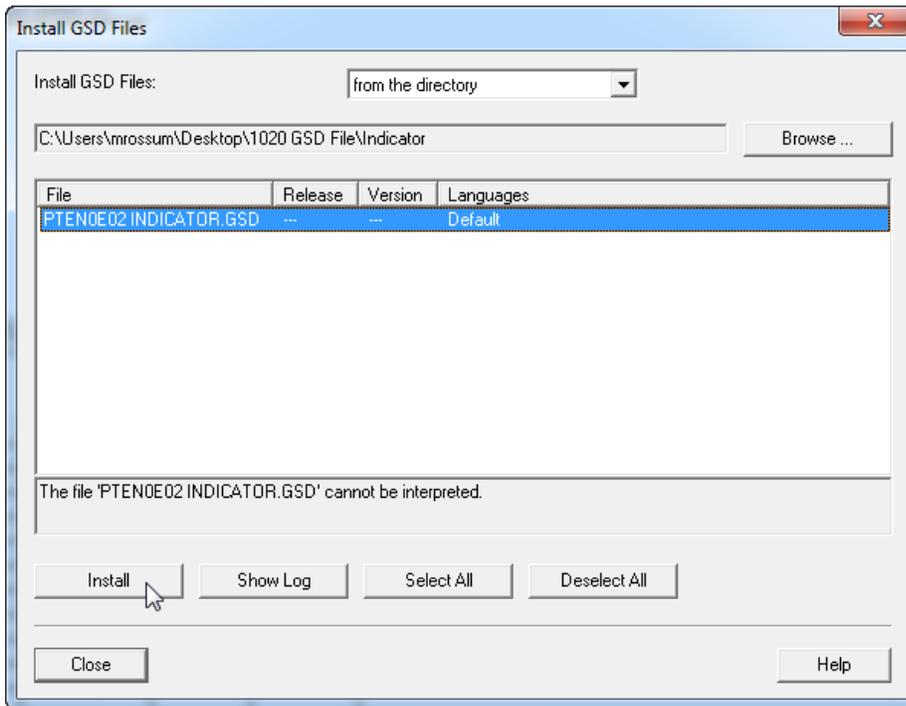

The following pop-up will appear, click on **Yes**.




When the installation is completed the following pop-up will appear. Click on **OK**.

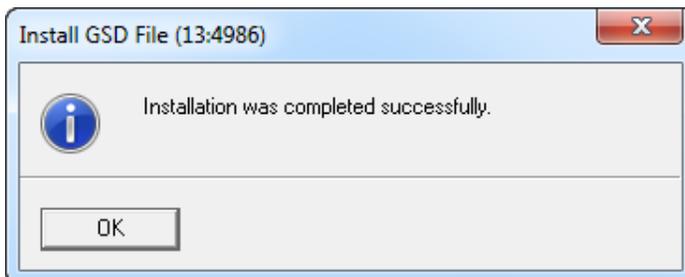


Click on **Close** to close the Install GSD Files window.

## Add the 1020 to the Profibus network

The 1020 can now be found under **Profibus DP → Additional Field Devices → Drivers**. Drag the 1020 to the DP master system.

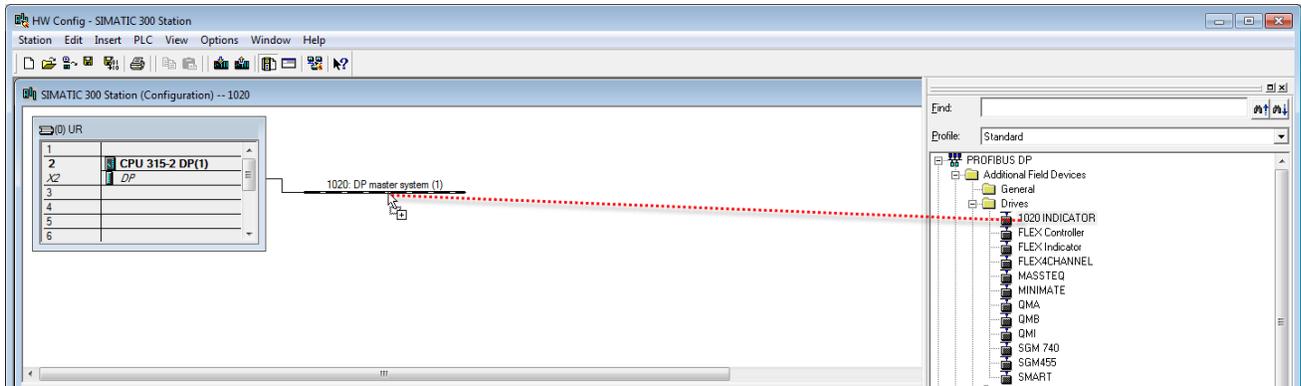


Set the Profibus address of the 1020 (the same address as used in Pi Mach II) and click on **OK**. See [Setup the 1020](#).

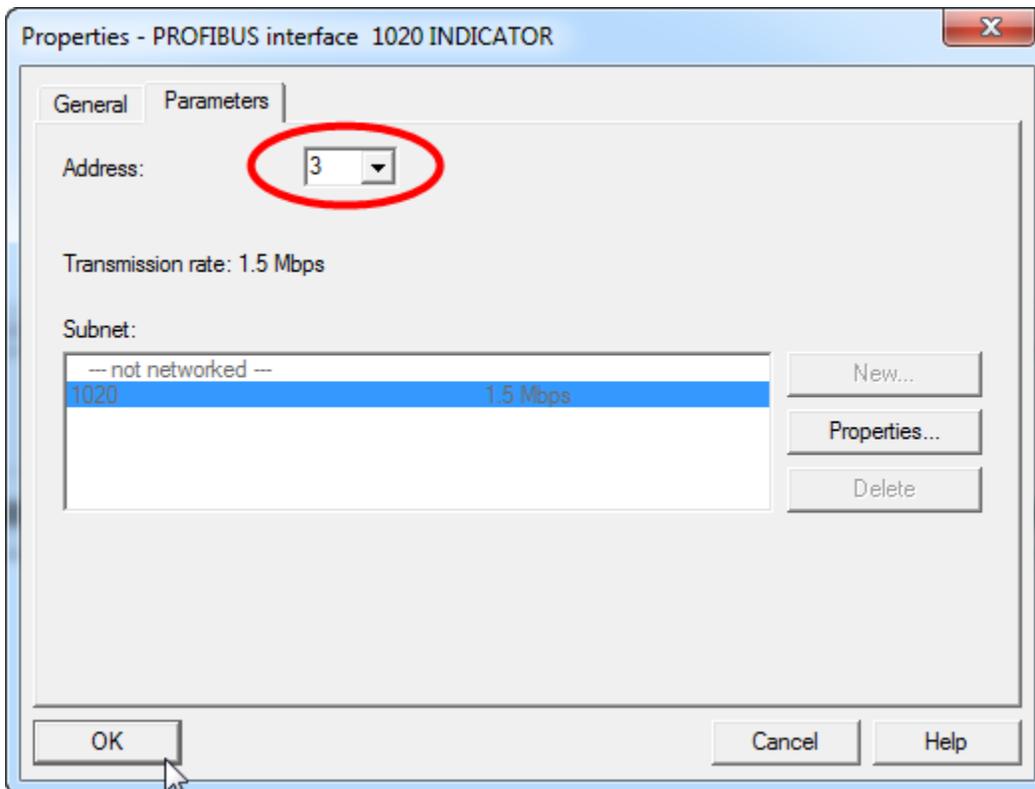


The 1020 is now connected to the : DP master system (1).

*Note: when the 1020 is selected, the Input and Output address of the 1020 is shown. These addresses are important to remember and are needed later to read the data from the 1020 or set data to the 1020.*

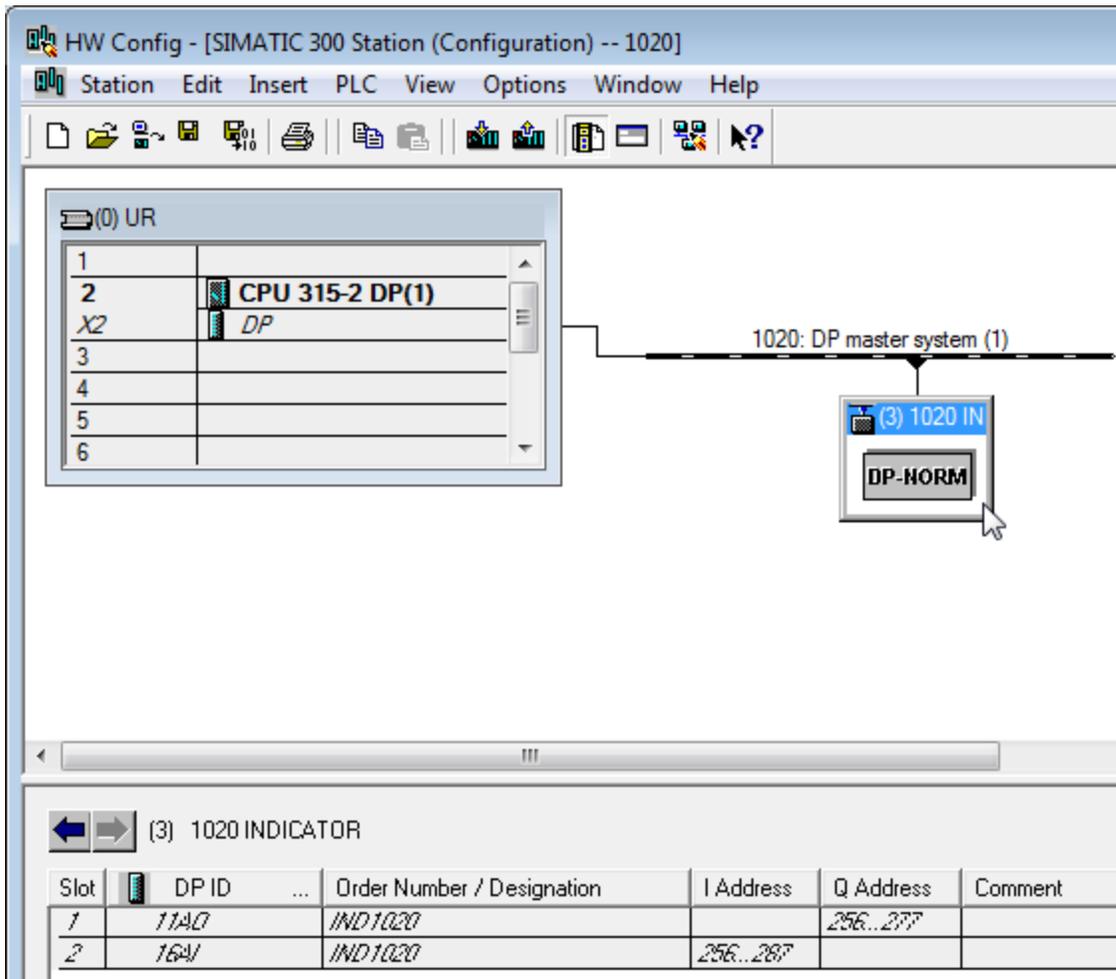


1020	Start address	End address
Input address	256	287
Output address	256	277

Click on **Save** to save the configuration.

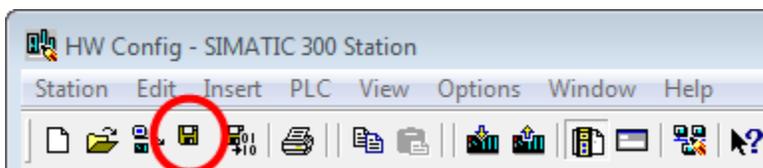


Click on **Download to Module** to load the settings into the PLC.


PENKO How to...  
Connect a 1020 to a Siemens PLC

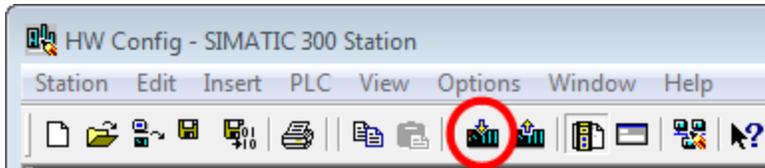


Select the PLC and click on **OK**.

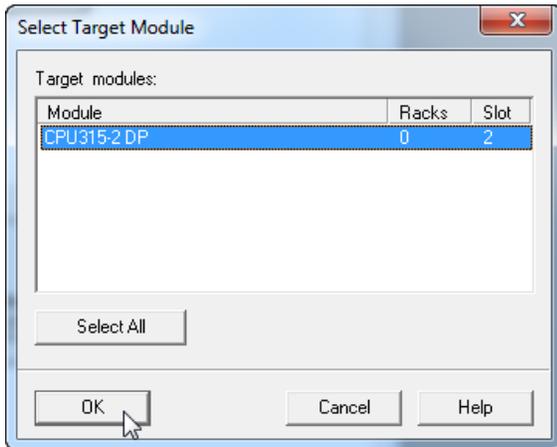


Select the node address and click on **OK**.

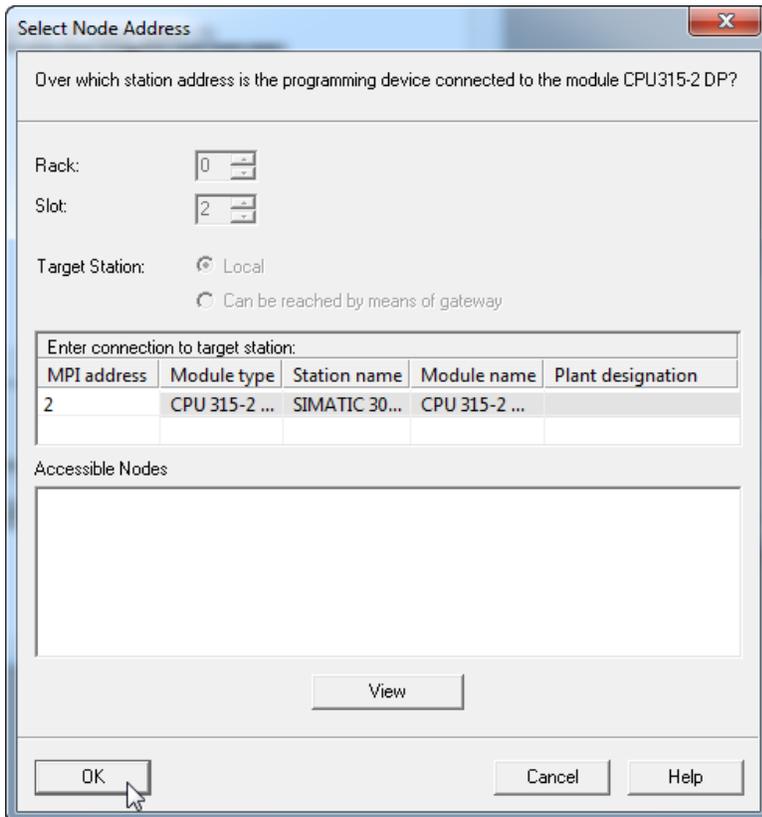


The downloading will start.

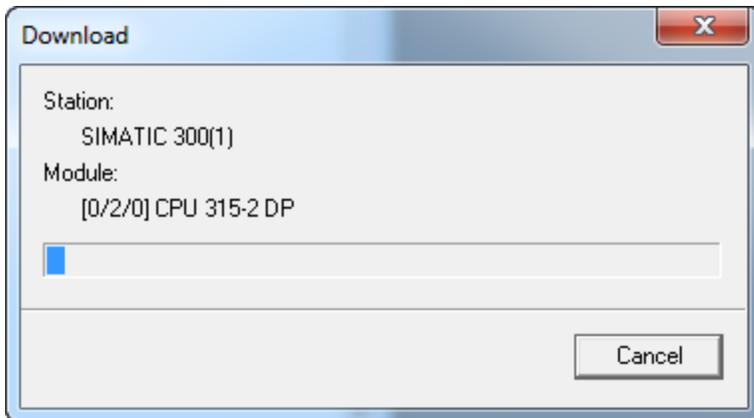

A pop-up will appear, click on **OK**.

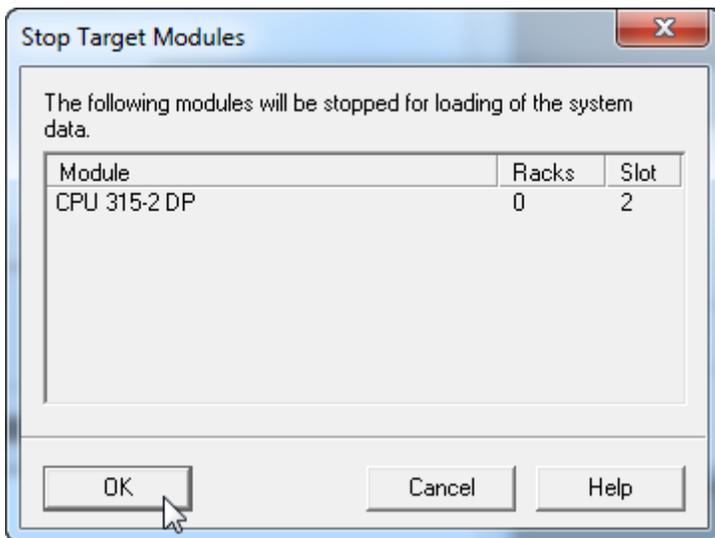


The downloading will resume. When the downloading is completed, a pop-up will appear to restart the module. Click **Yes**.

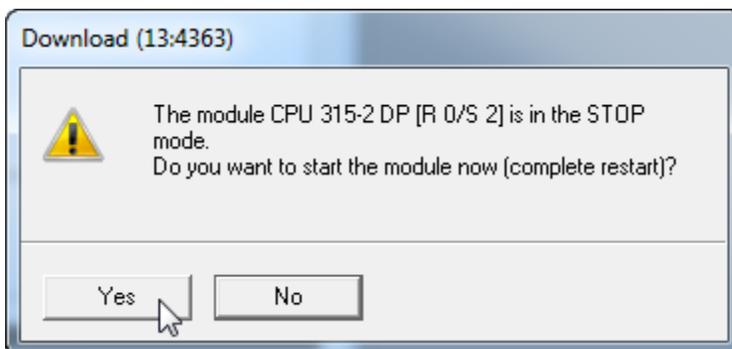

Close the **HW Config** program.


PENKO How to...  
Connect a 1020 to a Siemens PLC

The Profibus configuration is shown in **NetPro**. Click on **Save** and close **NetPro**.

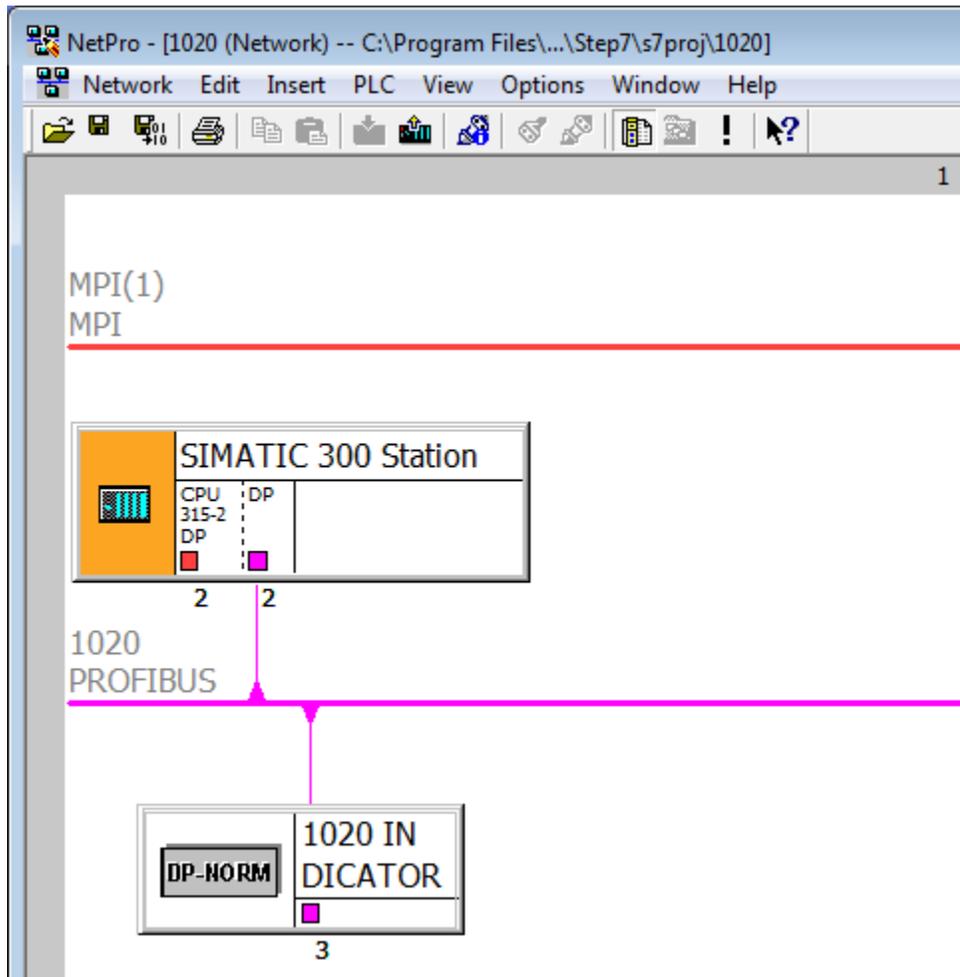


## SIMATIC Manager (2)

Go back to SIMATIC Manager and click on **Blocks**.

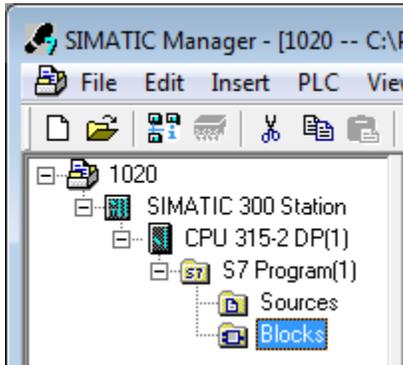


Double click on block **OB1**.

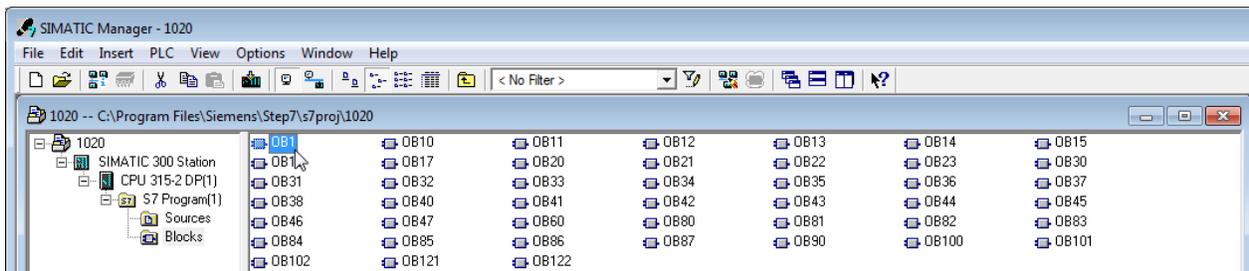


PENKO How to...  
Connect a 1020 to a Siemens PLC

The program **LAD/STL/FBD-Programming S7 Blocks** will open.

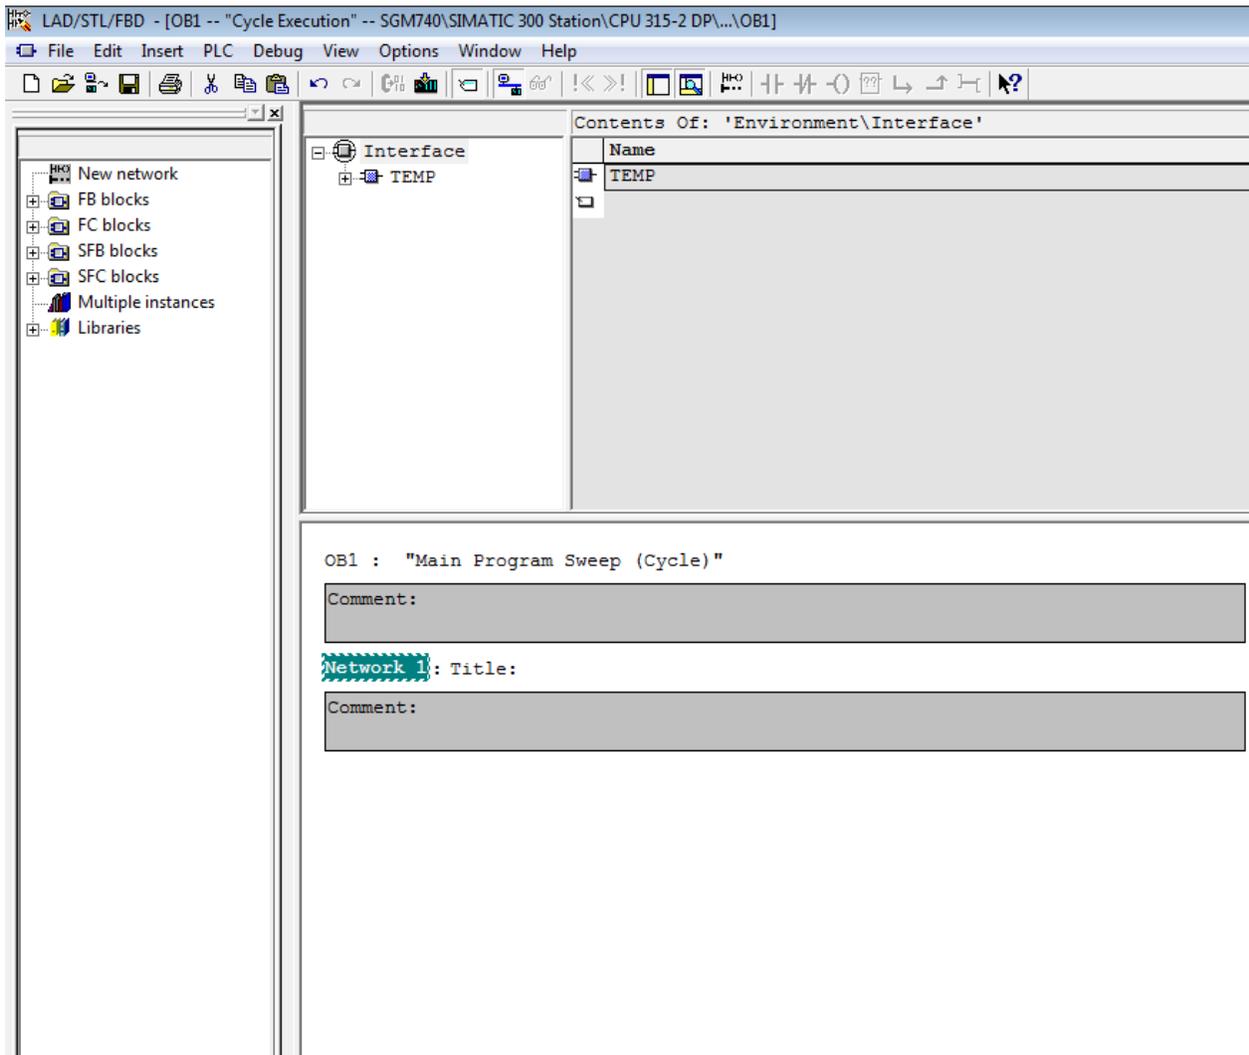

Click on the white surface below Comment to write a program.

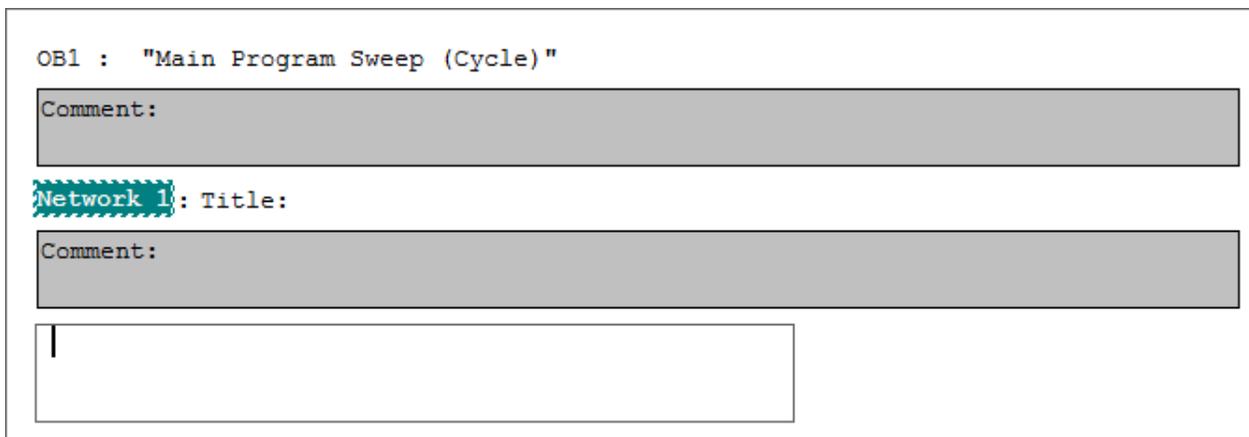

## GSD file explanation

To make sense of the data, open the GSD file in **Notepad**. The start addresses of the 1020 in- and outputs are needed to read or write the correct data from the 1020.

## Inputs

Note: the Start addresses are explained on page 19.

Note: In the examples below the start address of the 1020 inputs is PI 256.

```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;          word, 16 bit status
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;          double word, 32 bit signed integer, preset tare
;
;          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
```

Siemens PLC's input addresses have a length of 1 byte, for example the weight register (double word) has a length of 4 bytes, so if the start address is PI 256, so the next data which is the status (word) will start at PI 260 (4 bytes further). The table below will show the addresses of all the inputs of the 1020.

1 word equals 2 bytes.

1 Double word equals 4 bytes.

Address	Description
PID 256	Double word, Weight register
PIW 260	Word, Status
PIB 262	Byte, Command
PIB 263	Byte, Weight select register
PIW 264	Word, Inputs
PIW 266	Word, Outputs
PID 268	Double word, Preset tare
PID 272	Double word, Indicator gross x10
PID 276	Double word, Indicator net x10
PID 280	Double word, Indicator tare x10
PID 284	Double word, Indicator multirange weight

## Read weight register

The first 2 words of the inputs are the weight register, the weight register will show at address PID 256.


```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;         word, 16 bit status
;         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;         byte, 8 bit weight select register
;         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;         double word, 32 bit signed integer, preset tare
;
;         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
```

To read out the weight register, write the following lines:


```
L   PID 256
T   "Read Weight register"      MD100
```

The first line will load the weight output (double word) from the 1020. The second line will copy the weight value (double word) in MD 100.


Click on **Download** to load the program into the PLC.

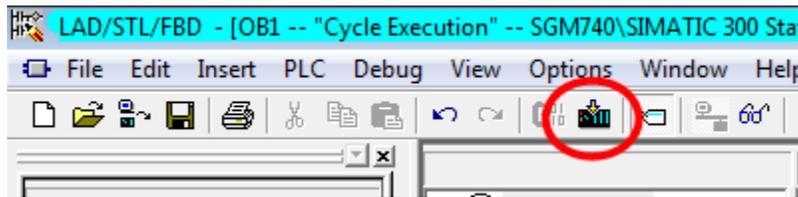

To view the live data, click on **PLC** and **Monitor/Modify Variables**.

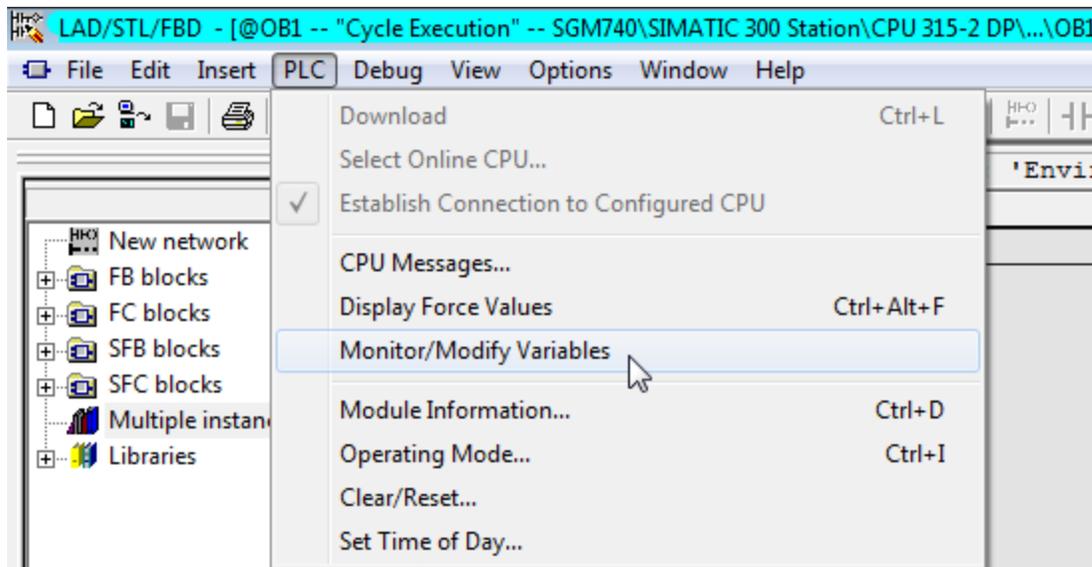

Enter the address **MD 100** and click on **Monitor Variable**. The live weight data is now shown.

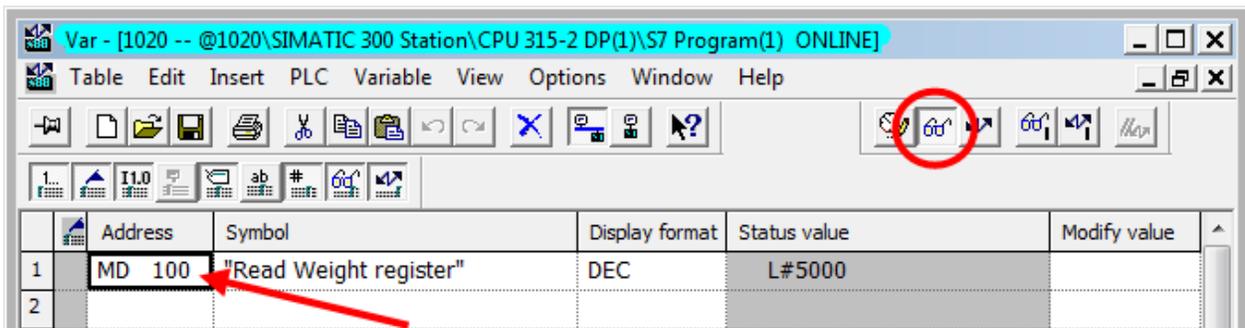

*Note: It's possible to choose any of the weight registers listed below, the chosen weight register will show at address PID 256 (weight register).*

```


I154 : general:
I155 : weight selection register definition
I156 : 0x00 = display weight includes multi range/interval step
I157 : 0x01 = fast gross
I158 : 0x02 = fast net
I159 : 0x03 = display gross
I160 : 0x04 = display net
I161 : 0x05 = tare
I162 : 0x06 = peak
I163 : 0x07 = Valley
I164 : 0x08 = display weight x10
I165 : 0x09 = fast gross x10
I166 : 0x0A = fast net x10
I167 : 0x0B = display gross x10
I168 : 0x0C = display net x10
I169 : 0x0D = tare x10
I170 : 0x0E = peak x10
I171 : 0x0F = Valley x10
I172 : 0x10 = ADC Sample
I173 : 0x11 - 0x75 = indicator register 1-100
I174 : 0x76 - 0xFF = reserved
    
```

To read the selected weight register, please go to [Read weight select register](#).

To select a weight register, please see [Select a weight register](#).

In the example below "Display net" is chosen.

To choose "Display net", set 04 in MB 133 (weight select register). In MB 107 the chosen weight select register is shown. The Chosen value is shown in MD 100.

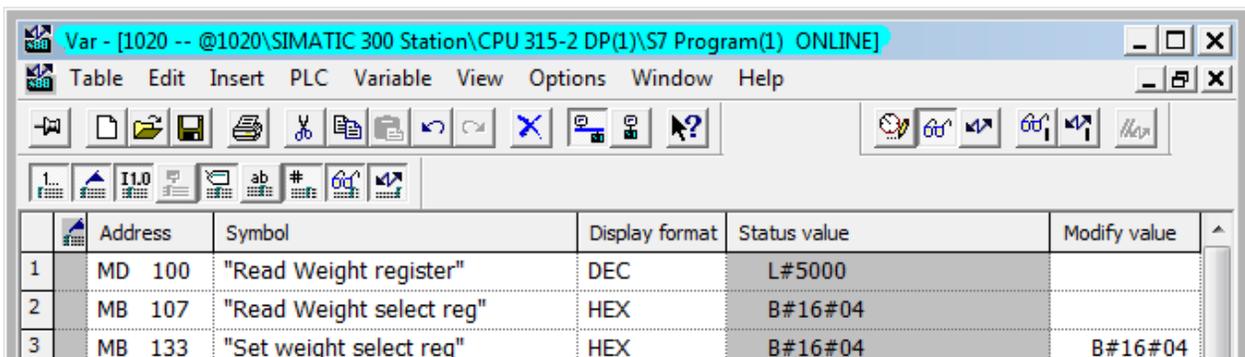

## Read status

The status will show at address PIW 260, the following statuses can be read from the 1020.

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
: Outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
:
: status bit definition
: 1 = hardware overload detected
: 2 = overload detected
: 3 = stable signal
: 4 = in stable range
: 5 = zero corrected
: 6 = center of zero
: 7 = in zero range
: 8 = zero tracking possible
: 9 = tare active
: 10 = preset tare active
: 11 = new sample available
: 12 = calibration invalid
: 13 = calibration enabled
: 14 = user certified operation
: 15 = reserved
: 16 = reserved
```

To read out the status, write the following lines:

```
L   PIW 260           //Load Status
T   "Read Status bits" //Store Status  MW104
```

The first line will load the status (word) from the 1020. The second line will copy the status (word) in MW 104.



PENKO How to...  
Connect a 1020 to a Siemens PLC

In the example below the “Stable Signal”, In Stable Range”, Zero corrected, Zero Tracking Possible” and “User Certified operation” are on.

*Note: The low byte and high byte are switched.*

	Address	Symbol	Display format	Status value	Modify value
3	MW 104	"Read Status bits"	BIN	2#0010_0000_1001_1100	
4	M 105.0	"Hardware overload"	BOOL	false	
5	M 105.1	"Overload detected"	BOOL	false	
6	M 105.2	"Stable signal"	BOOL	true	
7	M 105.3	"In stable range"	BOOL	true	
8	M 105.4	"Zero corrected"	BOOL	true	
9	M 105.5	"Center of zero"	BOOL	false	
10	M 105.6	"In zero range"	BOOL	false	
11	M 105.7	"Zero tracking possible"	BOOL	true	
12	M 104.0	"Tare active"	BOOL	false	
13	M 104.1	"Preset tare active"	BOOL	false	
14	M 104.2	"New sample available"	BOOL	false	
15	M 104.3	"Calibration invalid"	BOOL	false	
16	M 104.4	"Calibration enabled"	BOOL	false	
17	M 104.5	"User certified operation"	BOOL	true	
18	M 104.6	"Reserved 1"	BOOL	false	
19	M 104.7	"Reserved 2"	BOOL	false	

## Read commands

The commands will show at address PIB 262(high byte).

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs: byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
:
```

The following commands can be read from the 1020.

```

)135 : command bit definition
)136 : 1 = zero reset command
)137 : 2 = zero set command
)138 : 3 = tare off
)139 : 4 = tare on
)140 : 5 = preset tare command
)141 : 6 = freeze bit, freeze weigher registers at rising edge for selected weigher, if bit is 0 registers will be updated
)142 : use this bit to read out all necessary weigher registers without any interruption of the weigher, example:
)143 :   set bit 6
)144 :   read net
)145 :   read tare
)146 :   read net x10
)147 :   reset bit 6
)148 : 7 = indicator channel 2^0, channel is a helper register to select a wider range of registers. Reserved for the SGM and should be set to 0
)149 : 8 = indicator channel 2^1, channel is a helper register to select a wider range of registers. Reserved for the SGM and should be set to 0

```

To read out the commands, write the following lines:

```


L   PIB 262           //Load Command bits and weight select register
T   "Read Command bits" //Store Command bits and weight select register  MB106

```

The first line will load the commands (high byte) from the 1020. The second line will copy the commands (byte) in MB 106.

PENKO How to...  
Connect a 1020 to a Siemens PLC

In the example below the “Tare on” command is on.

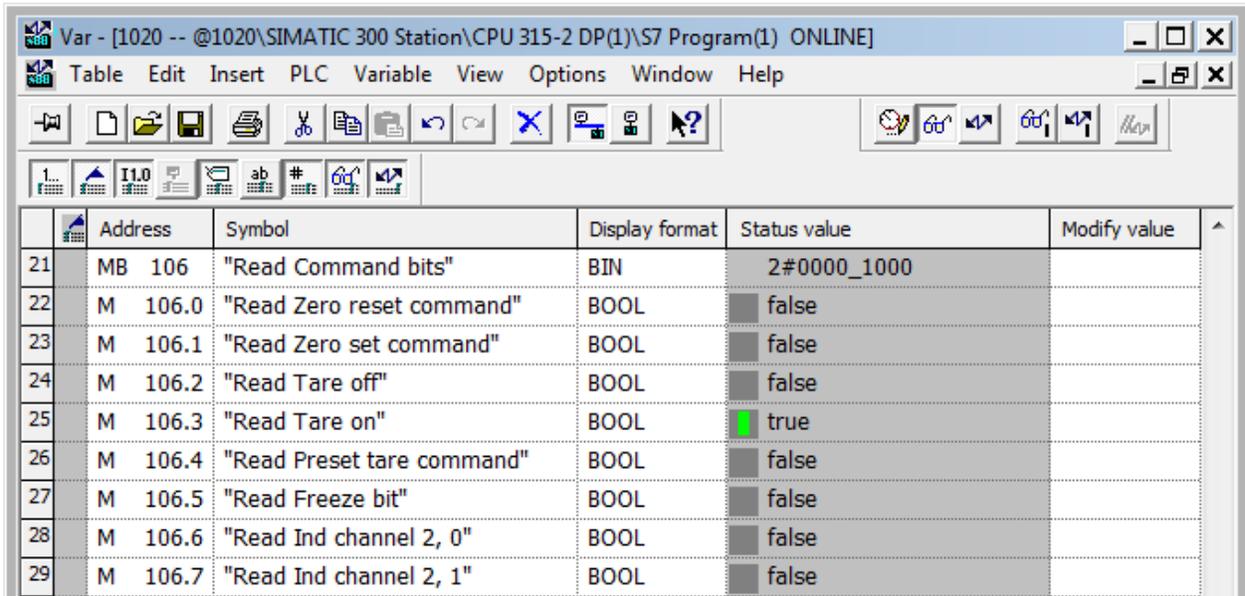

The screenshot shows the SIMATIC Manager interface with a table of variables. The table has columns for Address, Symbol, Display format, Status value, and Modify value. The 'Read Tare on' command at address M 106.3 is highlighted in green, indicating it is active (true).

	Address	Symbol	Display format	Status value	Modify value
21	MB 106	"Read Command bits"	BIN	2#0000_1000	
22	M 106.0	"Read Zero reset command"	BOOL	false	
23	M 106.1	"Read Zero set command"	BOOL	false	
24	M 106.2	"Read Tare off"	BOOL	false	
25	M 106.3	"Read Tare on"	BOOL	true	
26	M 106.4	"Read Preset tare command"	BOOL	false	
27	M 106.5	"Read Freeze bit"	BOOL	false	
28	M 106.6	"Read Ind channel 2, 0"	BOOL	false	
29	M 106.7	"Read Ind channel 2, 1"	BOOL	false	

To set the commands, please see [Set commands](#) for instructions.

## Read weight select register

The weight select register will show at address PIB 263 (low byte).

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: Outputs:  byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

The following weight select registers can be read from the 1020.


```
1154 : general:
1155 : weight selection register definition
1156 : 0x00 = display weight includes multi range/interval step
1157 : 0x01 = fast gross
1158 : 0x02 = fast net
1159 : 0x03 = display gross
1160 : 0x04 = display net
1161 : 0x05 = tare
1162 : 0x06 = peak
1163 : 0x07 = Valley
1164 : 0x08 = display weight x10
1165 : 0x09 = fast gross x10
1166 : 0x0A = fast net x10
1167 : 0x0B = display gross x10
1168 : 0x0C = display net x10
1169 : 0x0D = tare x10
1170 : 0x0E = peak x10
1171 : 0x0F = Valley x10
1172 : 0x10 = ADC Sample
1173 : 0x11 - 0x75 = indicator register 1-100
1174 : 0x76 - 0xFF = reserved
```

To read out the weight select register, write the following lines:

```
L    PIB 263          //Load Weight select register
T    "Read Weight select reg"  //Store Weight select register MB107
```

The first line will load the weight select register (Low byte) from the 1020. The second line will copy the weight select register (byte) in MB 107.

In the example below weight register “Display Net” is chosen.

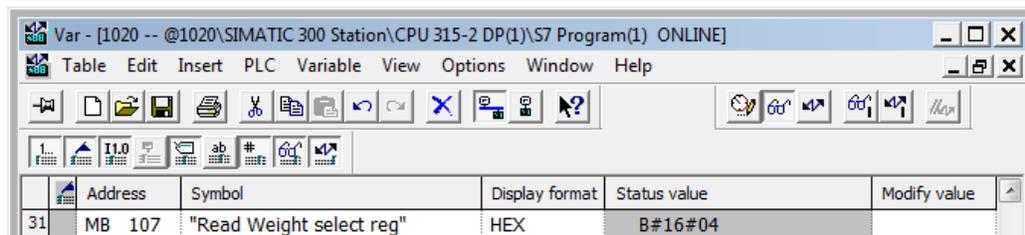

Address	Symbol	Display format	Status value	Modify value
31	MB 107	"Read Weight select reg"	HEX	B#16#04

To set the weight select register, please see [Set weight select register](#) for instructions.

## Read inputs

The 3 inputs of the 1020 will show at address PIW 264.

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double
word, 32 bit signed integer/float, weight register
word, 16 bit status
byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
byte, 8 bit weight select register
word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software

double word, 32 bit signed integer, preset tare

double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)

: outputs:
byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
byte, 8 bit weight select register

double word, 32 bit signed integer, preset tare. setup this register and at rising edge of command bit 5 preset tare is activated.

double word, 32 bit signed integer, level 1
double word, 32 bit signed integer, level 2
double word, 32 bit signed integer, level 3
double word, 32 bit signed integer, level 4
```

To read out the inputs, write the following lines:

```
L    PIW 264          //Load inputs
T    "Read Inputs"   //Store inputs  MW108
```

The first line will load the inputs (word) from the 1020. The second line will copy the inputs (word) in MW 108.

In the Example below input 1 is on.

	Address	Symbol	Display format	Status value	Modify value
33	MW 108	"Read Inputs"	BIN	2#0000_0000_0000_1001	
34	M 109.0	"Input 1"	BOOL	<span style="color: green;">■</span> true	
35	M 109.1	"Input 2"	BOOL	■ false	
36	M 109.2	"Input 3"	BOOL	■ false	

## Read outputs

The 4 outputs of the 1020 will show at address PIW 266.

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: Outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To read out the outputs, write the following lines:

```
L    PIW 266           //Load outputs
T    "Read Outputs"   //Store outputs  MW110
```

The first line will load the outputs (word) from the 1020. The second line will copy the outputs (word) in MW 110.

In the example below output 1 is on.

	Address	Symbol	Display format	Status value	Modify value
38	MW 110	"Read Outputs"	BIN	2#0000_0011_0000_0001	
39	M 111.0	"Output 1"	BOOL	true	
40	M 111.1	"Output 2"	BOOL	false	
41	M 111.2	"Output 3"	BOOL	false	
42	M 111.3	"Output 4"	BOOL	false	

## Read preset Tare

The Preset Tare value will show at address PID 268.


```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:          word, 16 bit status
:          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:          byte, 8 bit weight select register
:          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:          double word, 32 bit signed integer, preset tare
:
:          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:
:          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:          byte, 8 bit weight select register
:
:          double word, 32 bit signed integer, preset tare. setup this register and at rising edge of command bit 5 preset tare is activated.
:
:          double word, 32 bit signed integer, level 1
:          double word, 32 bit signed integer, level 2
:          double word, 32 bit signed integer, level 3
:          double word, 32 bit signed integer, level 4
```

To read out the preset tare, write the following lines:

```
L   PID 268           //Load preset tare value
T   "Read Preset tare value" //Store preset tare value MD112
```

The first line will load the preset tare (double word) from the 1020. The second line will copy the preset tare (double word) in MD 112.

In the example below the Preset Tare value is 100.

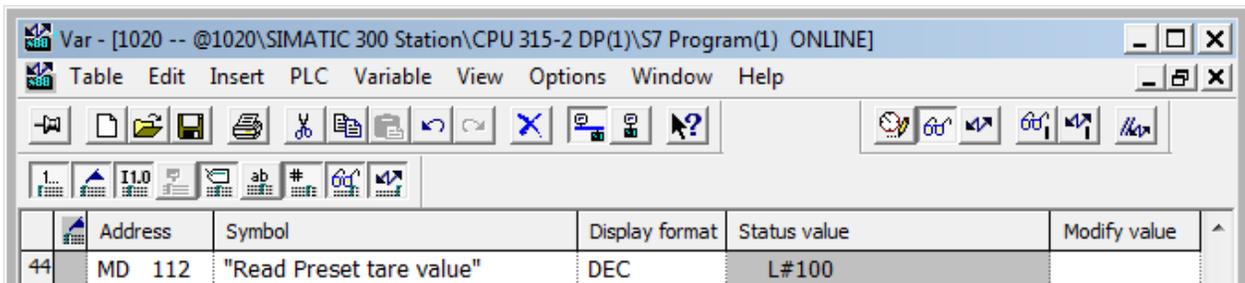

To set the preset tare, please see [Set preset tare](#) for instructions.

## Read indicator gross x 10

The indicator gross x 10 value will show at address PID 272.


```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To read out the indicator gross x10, write the following lines:

```
L   PID 272 //Load indicator value gross x10
T   "Read Ind value gross x10" //Store indicator value gross x10 MD116
```

The first line will load the indicator gross x10 (double word) from the 1020. The second line will copy the indicator gross x10 (double word) in MD 116.

In the example below the gross x 10 value is 50000.

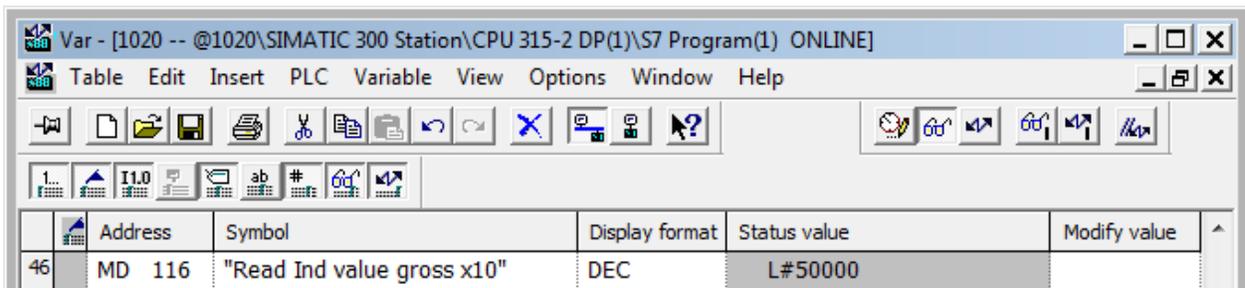

Address	Symbol	Display format	Status value	Modify value
46	MD 116 "Read Ind value gross x10"	DEC	L#50000	

## Read indicator net x 10

The indicator net x 10 value will show at address PID 276.


```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To read out the indicator net x10, write the following lines:

```
L   PID 276           //Load indicator value net x10
T   "Read Ind value net x10" //Store indicator value net x10 MD120
```

The first line will load the indicator net x10 (double word) from the 1020. The second line will copy the indicator net x10 (double word) in MD 120.

In the example below the net x 10 value is 50000.

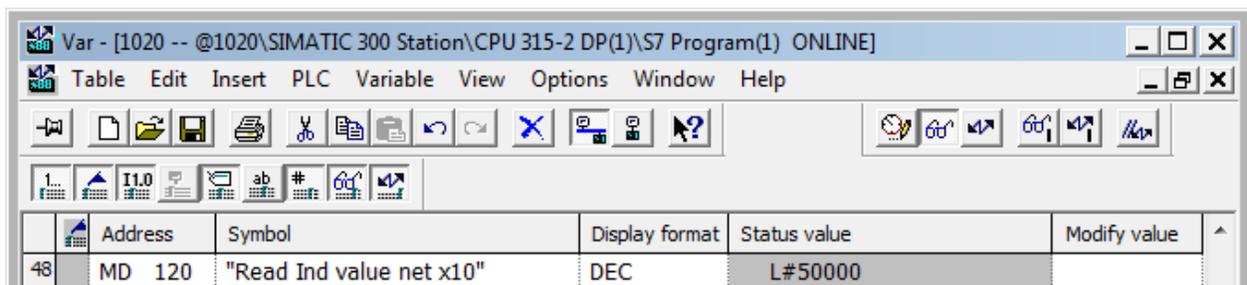

Address	Symbol	Display format	Status value	Modify value
48	MD 120 "Read Ind value net x10"	DEC	L#50000	

## Read indicator tare x 10

The indicator tare x 10 value will show at address PID 280.


```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To read out the indicator tare x10, write the following lines:

```
L   PID 280           //Load indicator value tare x10
T   "Read Ind value tare x10" //Store indicator value tare x10 MD124
```

The first line will load the indicator tare x10 (double word) from the 1020. The second line will copy the indicator tare x10 (double word) in MD 124.

In the example below the tare x 10 value is 0.

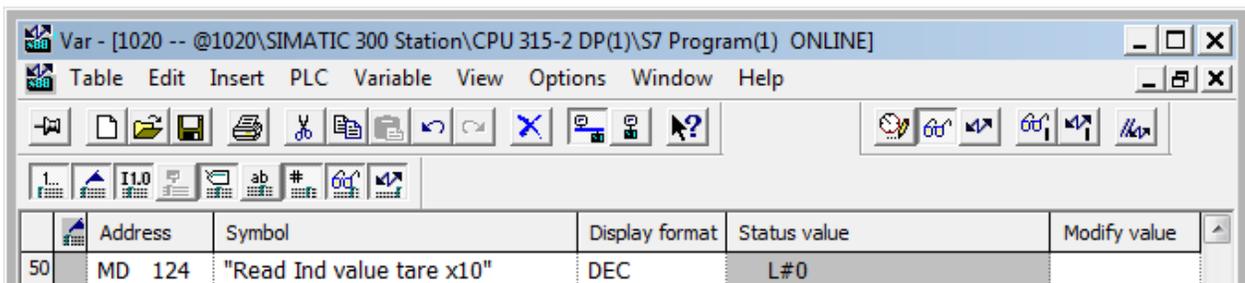

Address	Symbol	Display format	Status value	Modify value
50	MD 124 "Read Ind value tare x10"	DEC	L#0	

## Read multirange weight

The indicator multirange weight value will show at address PID 284.


```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To read out the multirange weight, write the following lines:

```
L    PID 284           //Load indicator value multirange weight
T    "Read Multirange weight" //Store indicator value multirange weight MD128
```

The first line will load the multirange weight (double word) from the 1020. The second line will copy the multirange weight (double word) in MD 128.

In the example below the multirange weight value is 50000.

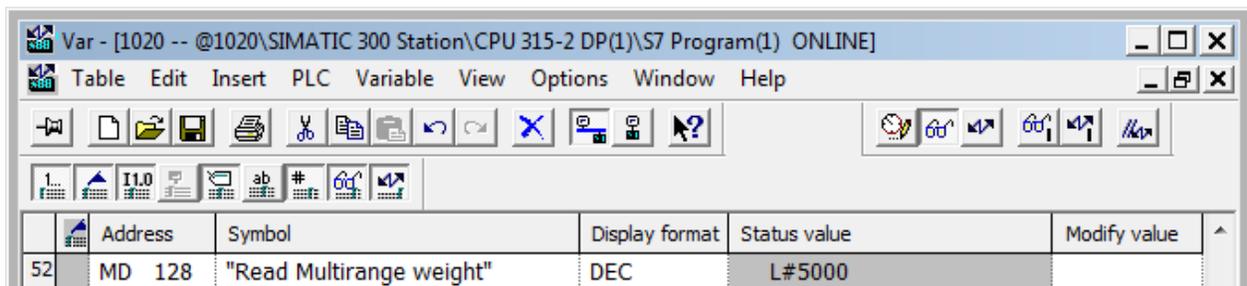

	Address	Symbol	Display format	Status value	Modify value
52	MD 128	"Read Multirange weight"	DEC	L#5000	

## Outputs

Note: the Start addresses are explained on page 19.

Note: In the examples below the start address of the 1020 inputs is PQ 256.

```
: outputs:      byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:              byte, 8 bit weight select register
:
:              double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:              double word, 32 bit signed integer, level 1
:              double word, 32 bit signed integer, level 2
:              double word, 32 bit signed integer, level 3
:              double word, 32 bit signed integer, level 4
```

Siemens PLC's output addresses have a length of 1 byte, for example the command (byte) has a length of 1 byte, so if the start address is PQ 256, so the next data which is the Weight (word) will start at PQ 257 (1 byte further. The table below will show the addresses of all the outputs of the 1020.

1 word equals 2 bytes

1 Double word equals 4 bytes

Address	Description
<b>PQB 256</b>	Byte, Command
<b>PQB 257</b>	Byte, Weight select register
<b>PQD 258</b>	Double word, Preset tare
<b>PQD 262</b>	Double word, Level 1
<b>PQD 266</b>	Double word, Level 2
<b>PQD 270</b>	Double word, Level 3
<b>PQD 274</b>	Double word, Level 4

## Set commands

The commands will start at address PQB 256 (high byte).

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs: byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

The following commands can be used.

```
}135 : command bit definition
}136 : 1 = zero reset command
}137 : 2 = zero set command
}138 : 3 = tare off
}139 : 4 = tare on
}140 : 5 = preset tare command
}141 : 6 = freeze bit, freeze weigher registers at rising edge for selected weigher, if bit is 0 registers will be updated
}142 : use this bit to read out all necessary weigher registers without any interruption of the weigher, example:
}143 :   set bit 6
}144 :   read net
}145 :   read tare
}146 :   read net x10
}147 :   reset bit 6
}148 : 7 = indicator channel 2^0, channel is a helper register to select a wider range of registers. Reserved for the SGM and should be set to 0
}149 : 8 = indicator channel 2^1, channel is a helper register to select a wider range of registers. Reserved for the SGM and should be set to 0
```


To set the commands, write the following lines:

```
//Send commands, weight select register, preset tare and levels for the PLC to the SGM 740 or SGM840 Weight
L   "Set commands"           //Load Command
T   PQB 256                   //Store Command
```

The first line will load the commands (byte) from MB 132. The second line will copy the commands (byte) into the 1020.

PENKO How to...  
Connect a 1020 to a Siemens PLC

In the example below the command "Tare On" is given to the 1020.

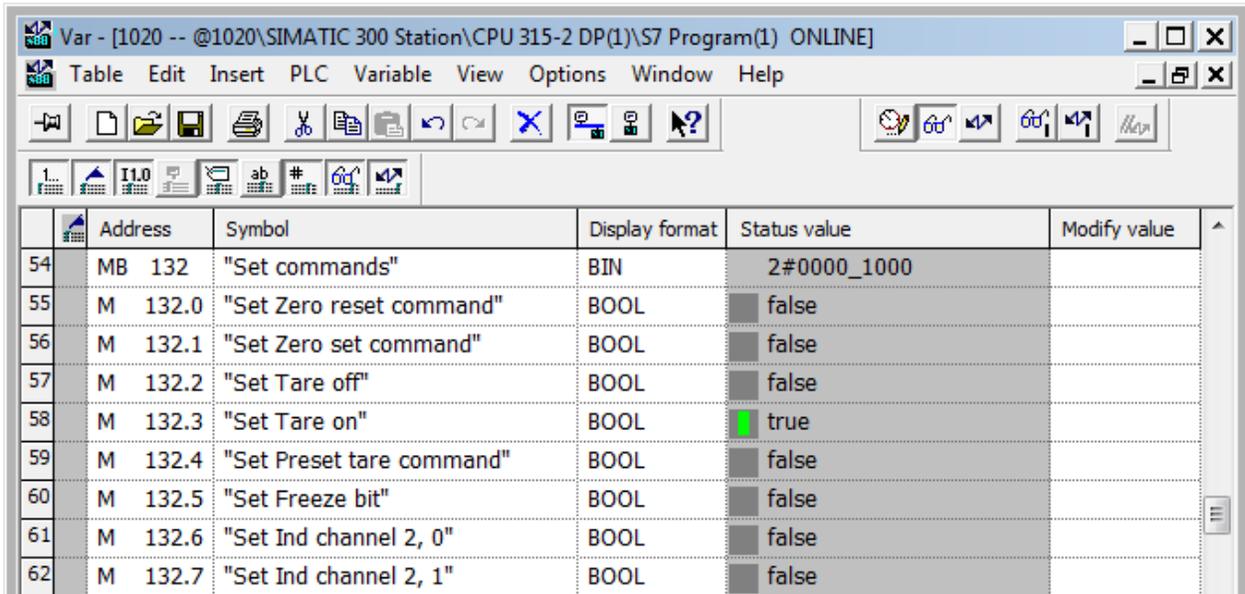

	Address	Symbol	Display format	Status value	Modify value
54	MB 132	"Set commands"	BIN	2#0000_1000	
55	M 132.0	"Set Zero reset command"	BOOL	false	
56	M 132.1	"Set Zero set command"	BOOL	false	
57	M 132.2	"Set Tare off"	BOOL	false	
58	M 132.3	"Set Tare on"	BOOL	true	
59	M 132.4	"Set Preset tare command"	BOOL	false	
60	M 132.5	"Set Freeze bit"	BOOL	false	
61	M 132.6	"Set Ind channel 2, 0"	BOOL	false	
62	M 132.7	"Set Ind channel 2, 1"	BOOL	false	

To check if the 1020 has executed the command, it's possible to read out the commands. Please see [Read commands](#) for instructions.

## Set weight select register

The weight select register will start at address PQB 257(low byte).

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: outputs:  byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:           byte, 8 bit weight select register
:
:           double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:           double word, 32 bit signed integer, level 1
:           double word, 32 bit signed integer, level 2
:           double word, 32 bit signed integer, level 3
:           double word, 32 bit signed integer, level 4
```

The following weight registers can be selected.

```
0154 : general:
0155 : weight selection register definition
0156 : 0x00 = display weight includes multi range/interval step
0157 : 0x01 = fast gross
0158 : 0x02 = fast net
0159 : 0x03 = display gross
0160 : 0x04 = display net
0161 : 0x05 = tare
0162 : 0x06 = peak
0163 : 0x07 = Valley
0164 : 0x08 = display weight x10
0165 : 0x09 = fast gross x10
0166 : 0x0A = fast net x10
0167 : 0x0B = display gross x10
0168 : 0x0C = display net x10
0169 : 0x0D = tare x10
0170 : 0x0E = peak x10
0171 : 0x0F = Valley x10
0172 : 0x10 = ADC Sample
0173 : 0x11 - 0x75 = indicator register 1-100
0174 : 0x76 - 0xFF = reserved
```


To set the weight select register, write the following lines:

```
L    "Set weight select reg"    //Load weight select register    MB133
T    PQB 257                    //Store weight select register
```

The first line will load the weight select register (byte) from MB133. The second line will copy the weight select register (byte) into the 1020.

PENKO How to...  
Connect a 1020 to a Siemens PLC

In the example below weight register "Display Net" is chosen. The Display Net weight will now be shown in MD 100.

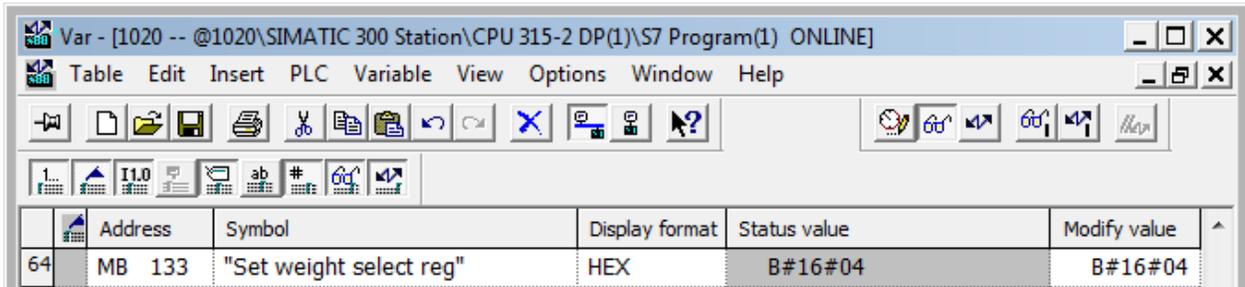

	Address	Symbol	Display format	Status value	Modify value
64	MB 133	"Set weight select reg"	HEX	B#16#04	B#16#04

To check if the 1020 has executed the weight select register, it's possible to read out the weight select register. Please see [Read weight select register](#) for instructions.

## Set preset tare

The preset tare can be set at address PQD 258.

**Note: to change the value of the preset tare, command bit 5 (preset tare command) must be set. The address will be M 132.4.**

```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;          word, 16 bit status
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;          double word, 32 bit signed integer, preset tare
;
;          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
;
; Outputs:
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;
;          double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
;
;          double word, 32 bit signed integer, level 1
;          double word, 32 bit signed integer, level 2
;          double word, 32 bit signed integer, level 3
;          double word, 32 bit signed integer, level 4
```

To set the preset tare, write the following lines:

```
L   "Set preset tare"           //Load Preset tare value      To set a new preset tare value, command "Preset tare" must be set high (M132.4) MD134
T   PQD 258                     //Store Preset tare value
```

The first line will load the preset tare (double word) from MD 134. The second line will copy the preset tare (double word) into the 1020. Even if the new preset tare is stored in the 1020, the old preset tare is used until command bit 5 is set high.

Use the following program to automatically change the preset tare if a new value is set in MD 134.

```
L   "Set preset tare"           //Load set preset tare value      To set a new preset tare value, command "Preset tare" must be set high (M132.4) MD134
T   PQD 258                     //Store set preset tare value
L   "Read Preset tare value"    //Load current preset tare value MD112
L   "Set preset tare"           //Load set preset tare MD134
<>D                             //If set preset tare not equal with read preset tare
=   "Set Preset tare command"   //Command bit "preset tare" is on, storing the new preset tare into the SGM740 or SGM840 MD132.4
```

In the example below the preset tare value is set, the value (100) will be shown in MD 134.

The screenshot shows the SIMATIC Manager interface with the MD 134 register selected. The register value is displayed as L#100.

Address	Symbol	Display format	Status value	Modify value
66	MD 134 "Set preset tare"	DEC	L#100	L#100

To check if the 1020 has executed the preset tare value, it's possible to read out the preset tare. Please see [Read preset tare](#) for instructions.

## Set level 1

The Setpoint for level 1 can be set at address PQD 262.

**Note: to change the value of level 1, command bit 7 and 8 (indicator channel 2,0 and 2,1) must be set. The addresses will be M 132.6 and M 132.7.**

```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;          word, 16 bit status
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;          double word, 32 bit signed integer, preset tare
;
;          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
;
; Outputs:
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;
;          double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
;
;          double word, 32 bit signed integer, level 1
;          double word, 32 bit signed integer, level 2
;          double word, 32 bit signed integer, level 3
;          double word, 32 bit signed integer, level 4
```

To set level 1, write the following lines:

```
L "Set level 1" //Load Value level 1 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD138
T PQD 262 //Store value level 1
```

The first line will load level 1 (double word) from MD 138. The second line will copy level 1 (double word) into the 1020.

In the example below level 1 is set, the value (10) will be shown in MD 138.

Address	Symbol	Display format	Status value	Modify value
68	MD 138	"Set level 1"	DEC	L#10
69	M 132.6	"Set Ind channel 2, 0"	BOOL	true
70	M 132.7	"Set Ind channel 2, 1"	BOOL	true

## Set level 2

The Setpoint for level 2 can be set at address PQD 266.

**Note: to change the value of level 2, command bit 7 and 8 (indicator channel 2,0 and 2,1) must be set. The addresses will be M 132.6 and M 132.7.**

```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;          word, 16 bit status
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;          double word, 32 bit signed integer, preset tare
;
;          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
;
; Outputs:
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;
;          double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
;
;          double word, 32 bit signed integer, level 1
;          double word, 32 bit signed integer, level 2
;          double word, 32 bit signed integer, level 3
;          double word, 32 bit signed integer, level 4
```

To set level 2, write the following lines:

```
L "Set level 2" //Load Value level 2 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD142
T PQD 266 //Store value level 2
```

The first line will load level 2 (double word) from MD 142. The second line will copy level 2 (double word) into the 1020.

In the example below level 2 is set, the value (20) will be shown in MD 142.

	Address	Symbol	Display format	Status value	Modify value
68	MD 142	"Set level 2"	DEC	L#20	L#20
69	M 132.6	"Set Ind channel 2, 0"	BOOL	true	
70	M 132.7	"Set Ind channel 2, 1"	BOOL	true	

### Set level 3

The Setpoint for level 3 can be set at address PQD 270

Note: to change the value of level 3, command bit 7 and 8 (indicator channel 2,0 and 2,1) must be set. The addresses will be M 132.6 and M 132.7.

```
Module = "IND1020" 0x6A, 0x5F
: Inputs : double word, 32 bit signed integer/float, weight register
:         word, 16 bit status
:         byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:         word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
:         word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
:
:         double word, 32 bit signed integer, preset tare
:
:         double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
:         double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
:         double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
:         double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
:
: Outputs: byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
:         byte, 8 bit weight select register
:
:         double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
:
:         double word, 32 bit signed integer, level 1
:         double word, 32 bit signed integer, level 2
:         double word, 32 bit signed integer, level 3
:         double word, 32 bit signed integer, level 4
```

To set level 3, write the following lines:

```
L "Set level 3" //Load Value level 3 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD146
T PQD 270 //Store value level 3
```

The first line will load level 3 (double word) from MD 146. The second line will copy level 3 (double word) into the 1020.

In the example below level 3 is set, the value (30) will be shown in MD 146.

Address	Symbol	Display format	Status value	Modify value
68 MD 146	"Set level 3"	DEC	L#30	L#30
69 M 132.6	"Set Ind channel 2, 0"	BOOL	true	
70 M 132.7	"Set Ind channel 2, 1"	BOOL	true	

### Set level 4

The Setpoint for level 4 can be set at address PQD 274.

**Note: to change the value of level 4, command bit 7 and 8 (indicator channel 2,0 and 2,1) must be set. The addresses will be M 132.6 and M 132.7.**

```
Module = "IND1020" 0x6A, 0x5F
; Inputs : double word, 32 bit signed integer/float, weight register
;          word, 16 bit status
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;          word, 16 inputs 1..16, inputs 4-16 are virtual inputs generated by software
;          word, 16 outputs 201..216, outputs 205-216 are virtual outputs generated by software
;
;          double word, 32 bit signed integer, preset tare
;
;          double word, 32 bit signed integer/float, indicator gross x10(same as weight select register 9)
;          double word, 32 bit signed integer/float, indicator net x10(same as weight select register 10)
;          double word, 32 bit signed integer/float, indicator tare x10(same as weight select register 13)
;          double word, 32 bit signed integer/float, multirange weight(same as weight select register 0)
;
Outputs:
;          byte, 8 bit command (if addressed as word high byte is command, low byte is select register)
;          byte, 8 bit weight select register
;
;          double word, 32 bit signed integer, preset tare. Setup this register and at rising edge of command bit 5 preset tare is activated.
;
;          double word, 32 bit signed integer, level 1
;          double word, 32 bit signed integer, level 2
;          double word, 32 bit signed integer, level 3
;          double word, 32 bit signed integer, level 4
```

To set level 4, write the following lines:

```
L "Set level 4" //Load Value level 4 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD150
T PQD 274 //Store value level 4
```

The first line will load level 4 (double word) from MD 150. The second line will copy level 4 (double word) into the 1020.

In the example below level 4 is set, the value (40) will be shown in MD 150.

	Address	Symbol	Display format	Status value	Modify value
68	MD 150	"Set level 4"	DEC	L#40	L#40
69	M 132.6	"Set Ind channel 2, 0"	BOOL	true	
70	M 132.7	"Set Ind channel 2, 1"	BOOL	true	

## Complete program to read and write values

### Read:

```
//1020 Weight, status, weight select register, inputs, outputs information to the PLC

L   FID 256           //Load Weight register
T   "Read Weight register" //Store Weight register                                MD100

L   FIW 260           //Load Status
T   "Read Status bits"   //Store Status                                MW104

L   FIB 262           //Load Command bits and weight select register
T   "Read Command bits" //Store Command bits and weight select register        MB106

L   FIB 263           //Load Weight select register
T   "Read Weight select reg" //Store Weight select register                                MB107

L   FIW 264           //Load inputs
T   "Read Inputs"       //Store inputs                                MW108

L   PIW 266           //Load outputs
T   "Read Outputs"     //Store outputs                                MW110

L   PID 268           //Load preset tare value
T   "Read Preset tare value" //Store preset tare value                                MD112

L   PID 272           //Load indicator value gross x10
T   "Read Ind value gross x10" //Store indicator value gross x10                        MD116

L   PID 276           //Load indicator value net x10
T   "Read Ind value net x10" //Store indicator value net x10                        MD120

L   PID 280           //Load indicator value tare x10
T   "Read Ind value tare x10" //Store indicator value tare x10                        MD124

L   PID 284           //Load indicator value multirange weight
T   "Read Multirange weight" //Store indicator value multirange weight                MD128
```

### Write:

```
//Send commands, weight select register, preset tare and levels for the PLC to the 1020

L   "Set commands" //Load Command                                MB132
T   FQB 256        //Store Command

L   "Set weight select reg" //Load weight select register                                MB133
T   FQB 257        //Store weight select register

L   "Set preset tare" //Load set preset tare value To set a new preset tare value, command "Preset tare" must be set high (M132.4) MD134
T   PQD 258        //Store set preset tare value
L   "Read Preset tare value" //Load current preset tare value                                MD112
L   "Set preset tare" //Load set preset tare                                MD134
<D
=   "Set Preset tare command" //Command bit "preset tare" is on, storing the new preset tare into the SGM740 or SGM840 M132.4

L   "Set level 1" //Load Value level 1 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD138
T   PQD 262        //Store value level 1

L   "Set level 2" //Load Value level 2 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD142
T   PQD 266        //Store value level 2

L   "Set level 3" //Load Value level 3 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD146
T   PQD 270        //Store value level 3

L   "Set level 4" //Load Value level 4 To set a new setpoint level, command "indicator channel 2,0 and 2,1 must be set high (132.6 and 132.7) MD150
T   PQD 274        //Store value level 4
```

## Variable table

Read:

Address	Symbol	Display format	Status value	Modify value
1	MD 100	"Read Weight register"	DEC	L#0
2				
3	MW 104	"Read Status bits"	BIN	2#0010_0001_1000_1100
4	M 105.0	"Hardware overload"	BOOL	false
5	M 105.1	"Overload detected"	BOOL	false
6	M 105.2	"Stable signal"	BOOL	true
7	M 105.3	"In stable range"	BOOL	true
8	M 105.4	"Zero corrected"	BOOL	false
9	M 105.5	"Center of zero"	BOOL	false
10	M 105.6	"In zero range"	BOOL	false
11	M 105.7	"Zero tracking possible"	BOOL	true
12	M 104.0	"Tare active"	BOOL	true
13	M 104.1	"Preset tare active"	BOOL	false
14	M 104.2	"New sample available"	BOOL	false
15	M 104.3	"Calibration invalid"	BOOL	false
16	M 104.4	"Calibration enabled"	BOOL	false
17	M 104.5	"User certified operation"	BOOL	true
18	M 104.6	"Reserved 1"	BOOL	false
19	M 104.7	"Reserved 2"	BOOL	false
20				
21	MB 106	"Read Command bits"	BIN	2#1100_1000
22	M 106.0	"Read Zero reset command"	BOOL	false
23	M 106.1	"Read Zero set command"	BOOL	false
24	M 106.2	"Read Tare off"	BOOL	false
25	M 106.3	"Read Tare on"	BOOL	true
26	M 106.4	"Read Preset tare command"	BOOL	false
27	M 106.5	"Read Freeze bit"	BOOL	false
28	M 106.6	"Read Ind channel 2, 0"	BOOL	true
29	M 106.7	"Read Ind channel 2, 1"	BOOL	true
30				
31	MB 107	"Read Weight select reg"	HEX	B#16#04
32				
33	MW 108	"Read Inputs"	BIN	2#0000_0000_0000_1001
34	M 109.0	"Input 1"	BOOL	true
35	M 109.1	"Input 2"	BOOL	false
36	M 109.2	"Input 3"	BOOL	false
37				
38	MW 110	"Read Outputs"	BIN	2#0000_0011_0000_0000
39	M 111.0	"Output 1"	BOOL	false
40	M 111.1	"Output 2"	BOOL	false
41	M 111.2	"Output 3"	BOOL	false
42	M 111.3	"Output 4"	BOOL	false
43				
44	MD 112	"Read Preset tare value"	DEC	L#100
45				
46	MD 116	"Read Ind value gross x10"	DEC	L#50000
47				
48	MD 120	"Read Ind value net x10"	DEC	L#-1
49				
50	MD 124	"Read Ind value tare x10"	DEC	L#50001
51				
52	MD 128	"Read Multirange weight"	DEC	L#0

PENKO How to...  
Connect a 1020 to a Siemens PLC

**Write:**

	Address	Symbol	Display format	Status value	Modify value
54	MB 132	"Set commands"	BIN	2#1100_1000	
55	M 132.0	"Set Zero reset command"	BOOL	false	
56	M 132.1	"Set Zero set command"	BOOL	false	
57	M 132.2	"Set Tare off"	BOOL	false	
58	M 132.3	"Set Tare on"	BOOL	true	
59	M 132.4	"Set Preset tare command"	BOOL	false	
60	M 132.5	"Set Freeze bit"	BOOL	false	
61	M 132.6	"Set Ind channel 2, 0"	BOOL	true	
62	M 132.7	"Set Ind channel 2, 1"	BOOL	true	
63					
64	MB 133	"Set weight select reg"	HEX	B#16#04	B#16#04
65					
66	MD 134	"Set preset tare"	DEC	L#100	L#100
67					
68	MD 150	"Set level 4"	DEC	L#40	L#40
69	M 132.6	"Set Ind channel 2, 0"	BOOL	true	
70	M 132.7	"Set Ind channel 2, 1"	BOOL	true	
71	MD 142	"Set level 2"	DEC	L#20	L#20
72					
73	MD 146	"Set level 3"	DEC	L#30	L#30
74					
75	MD 150	"Set level 4"	DEC	L#40	L#40

1020\SIMATIC 300 Station...\S7 Program(1) RUN



## About PENKO

Our design expertise include systems for manufacturing plants, bulk weighing, check weighing, force measuring and process control. For over 35 years, PENKO Engineering B.V. has been at the forefront of development and production of high-accuracy, high-speed weighing systems and our solutions continue to help cut costs, increase ROI and drive profits for some of the largest global brands, such as Cargill, Sara Lee, Heinz, Kraft Foods and Unilever to name but a few.

Whether you are looking for a simple stand-alone weighing system or a high-speed weighing and dosing controller for a complex automated production line, PENKO has a comprehensive range of standard solutions you can rely on.

## Certifications

PENKO sets high standards for its products and product performance which are tested, certified and approved by independent expert and government organizations to ensure they meet – and even – exceed metrology industry guidelines. A library of testing certificates is available for reference on:

[http://penko.com/nl/publications\\_certificates.html](http://penko.com/nl/publications_certificates.html)



## PENKO Professional Services

PENKO is committed to ensuring every system is installed, tested, programmed, commissioned and operational to client specifications. Our engineers, at our weighing center in Ede, Netherlands, as well as our distributors around the world, strive to solve most weighing-system issues within the same day. On a monthly basis PENKO offers free training classes to anyone interested in exploring modern, high-speed weighing instruments and solutions. A schedule of training sessions is found on: [www.penko.com/training](http://www.penko.com/training)

## PENKO Alliances

PENKO's worldwide network: Australia, Belgium, Brazil, China, Denmark, Germany, Egypt, Finland, France, India, Italy, Netherlands, Norway, Poland, Portugal, Slovakia, Spain, Syria, Turkey, United Kingdom, South Africa, Slovakia Sweden, Switzerland and Singapore. A complete overview you will find on: [www.penko.com/dealers](http://www.penko.com/dealers)

